

# LIST OF CONNECTIONS

CONNECTION CODES	CONNECTION TITLES
103A	HEADLIGHT POSITION CONTROL
103L	FRONT HEIGHT SENSOR SHUNT
103M	REAR HEIGHT SENSOR SHUNT
104A	ELECTRIC COOLANT PUMP - CONTROL > COMPUTER
107A	MOBILE PHONE LOUDSPEAKER + SIGNAL
107B	MOBILE PHONE LOUDSPEAKER - SIGNAL
107D	TELEPHONE RADIO CUT-OFF SIGNAL
107G	HANDS FREE TELEPHONE MICROPHONE +
107H	HANDS FREE TELEPHONE MICROPHONE -
107K	TELEPHONE AERIAL SIGNAL
115A	OIL TEMPERATURE SENSOR - SIGNAL
133B	INSTRUMENT PANEL CAN H SIGNAL > COMPUTER
133C	INSTRUMENT PANEL CAN L SIGNAL > COMPUTER
139A	DIESEL FUEL FILTER HEATER + CONTROL
13AC	FOOTWELL LIGHTING TIMER + CONTROL
13AM	RIGHT-HAND COURTESY MIRROR LIGHTING SWITCH
13AN	LEFT-HAND COURTESY MIRROR LIGHTING SWITCH
13E	INTERIOR LIGHTS - CONTROL > TIMER
141B	INFORMATION DISPLAY STEERING WHEEL MOUNTED CONTROL LINE 1 SIGNAL
141C	INFORMATION DISPLAY STEERING WHEEL MOUNTED CONTROL LINE 2 SIGNAL
141D	INFORMATION DISPLAY STEERING WHEEL MOUNTED CONTROL LINE 3 SIGNAL
141G	INFORMATION DISPLAY STEERING WHEEL MOUNTED CONTROL LINE 4 SIGNAL
141H	INFORMATION DISPLAY STEERING WHEEL MOUNTED CONTROL LINE 5 SIGNAL
141K	INFORMATION DISPLAY STEERING WHEEL MOUNTED CONTROL COLUMN 1 SIGNAL
141L	INFORMATION DISPLAY STEERING WHEEL MOUNTED CONTROL COLUMN 2 SIGNAL
141M	INFORMATION DISPLAY STEERING WHEEL MOUNTED CONTROL COLUMN 3 SIGNAL
141N	INFORMATION DISPLAY STEERING WHEEL MOUNTED CONTROL COLUMN 4 SIGNAL
141P	INFORMATION DISPLAY STEERING WHEEL MOUNTED CONTROL COLUMN 5 SIGNAL
14K	WINDSCREEN WIPER TIMER LOW SPEED + CONTROL
14L	WINDSCREEN WIPER TIMER HIGH SPEED + CONTROL
14M	WINDSCREEN WIPER PARK POSITION CONTROL > COMPUTER
14S	RAIN SENSOR SERIAL LINE SIGNAL
153A	POWER ASSISTED STEERING CAN H SIGNAL
153B	POWER ASSISTED STEERING CAN L SIGNAL
15A	HEATED REAR SCREEN WARNING LIGHT CONTROL
15LP	PROTECTED HEATED REAR SCREEN + CONTROL
15M	HEATED REAR SCREEN RELAY - CONTROL
15RP	PROTECTED HEATED REAR VIEW MIRROR + CONTROL
16A	WINDSCREEN WASHER PUMP + CONTROL
19E	MAIN BEAM HEADLIGHTS - CONTROL > DIMMER
20AG	REAR SCREEN MOTOR OPENING AUTHORISED FEED
20AH	OPENING REAR SCREEN STATUS SIGNAL
20AL	REAR INTERIOR LOCKING CONTROL
20AW	ONE-TOUCH DOOR LOCKING/UNLOCKING CONTROL
20BC	DRIVER'S DOOR / FUEL FILLER FLAP UNLOCKING MOTOR CONTROL
20BD	OPEN FRONT/REAR PASSENGER DOORS MOTOR CONTROL
20BG	REAR DOORS DEADLOCKING STATUS SIGNAL
20BH	DRIVER'S DOOR / FUEL FILLER FLAP LOCK MOTOR CONTROL
20BK	PASSENGER DOORS / REAR DOORS LOCKING MOTOR CONTROL
20G	TAILGATE MOTOR OPEN CONTROL
20J	REAR SCREEN MOTOR OPEN
20M	DOOR LOCKING LED
20S	TAILGATE MOTOR OPENING AUTHORISED FEED

# LIST OF CONNECTIONS

CONNECTION CODES	CONNECTION TITLES
20T	CHILD SAFETY LED - CONTROL
20W	REAR DEADLOCKING MOTOR CONTROL
20X	FRONT DEADLOCKING MOTOR CONTROL
21A	DRIVER'S ELECTRIC WINDOW UP CONTROL
21B	DRIVER'S ELECTRIC WINDOW DOWN CONTROL
21C	ONE-TOUCH ELECTRIC WINDOW NORMAL UP - CONTROL
21E	ONE-TOUCH ELECTRIC WINDOW NORMAL DOWN - CONTROL
21K	ANTI-PINCH SUNROOF/ELECTRIC WINDOW SERIAL LINE SIGNAL
22A	PASSENGER'S ELECTRIC WINDOW UP CONTROL
22B	PASSENGER'S ELECTRIC WINDOW DOWN CONTROL
22C	FRONT ELECTRIC WINDOW CONTROL 1
22D	FRONT ELECTRIC WINDOW CONTROL 2
23A	ELECTRIC WINDOW CONTROL > RIGHT-HAND REAR QUARTER LIGHT CLOSE
23B	ELECTRIC WINDOW DOWN CONTROL > RIGHT HAND REAR QUARTER LIGHT OPEN
23C	ELECTRIC WINDOW UP CONTROL > LEFT HAND REAR QUARTER LIGHT CLOSE
23D	ELECTRIC WINDOW DOWN CONTROL > LEFT HAND REAR QUARTER LIGHT OPEN
23G	RIGHT HAND REAR ELECTRIC WINDOW CONTROL 1
23H	RIGHT HAND REAR ELECTRIC WINDOW CONTROL 2
23J	LEFT HAND REAR ELECTRIC WINDOW CONTROL 1
23K	LEFT HAND REAR ELECTRIC WINDOW CONTROL 2
24A	REAR SCREEN WASHER PUMP + CONTROL
26AA	KEYLESS VEHICLE DRIVER'S FRONT DOOR EXTERNAL AERIAL A SIGNAL
26AB	KEYLESS VEHICLE DRIVER'S SIDE FRONT DOOR EXTERNAL AERIAL B SIGNAL
26AC	KEYLESS VEHICLE FRONT PASSENGER DOOR EXTERNAL AERIAL A SIGNAL
26AD	KEYLESS VEHICLE FRONT RIGHT DOOR EXTERNAL AERIAL SIGNAL 2
26AG	KEYLESS VEHICLE DRIVER'S SIDE REAR DOOR EXTERNAL AERIAL A SIGNAL
26AH	KEYLESS VEHICLE DRIVER'S SIDE REAR DOOR EXTERNAL AERIAL B SIGNAL
26AK	KEYLESS VEHICLE REAR PASSENGER DOOR EXTERNAL AERIAL A SIGNAL
26AL	KEYLESS VEHICLE REAR PASSENGER DOOR EXTERNAL AERIAL B SIGNAL
26AM	KEYLESS VEHICLE BOOT LID EXTERNAL AERIAL A SIGNAL
26AN	KEYLESS VEHICLE BOOT LID EXTERNAL AERIAL SIGNAL2
26AP	KEYLESS VEHICLE LOCKING SIGNAL / DRIVER SIDE DOORS SWITCH
26AQ	KEYLESS VEHICLE LOCKING SIGNAL / PASSENGER SIDE DOORS SWITCH
26AR	KEYLESS VEHICLE LEVEL 2 LOCKING SIGNAL / BOOT LID SWITCH
26AT	KEYLESS VEHICLE INTERIOR AERIAL 1 SIGNAL 1
26AU	KEYLESS VEHICLE FRONT INTERIOR AERIAL SIGNAL 2
26AV	KEYLESS VEHICLE INTERIOR AERIAL 2 SIGNAL 1
26AW	KEYLESS VEHICLE INTERIOR AERIAL 2 SIGNAL 2
26AX	KEYLESS VEHICLE INTERIOR AERIAL 3 SIGNAL 1
26AY	KEYLESS VEHICLE CENTRAL INTERIOR AERIAL SIGNAL 2
26AZ	KEYLESS VEHICLE STEERING COLUMN LOCK CAN H SIGNAL
26BA	KEYLESS VEHICLE STEERING COLUMN LOCK CAN L SIGNAL
26BC	CARD LOCATION ELECTROLUMINESCENT DIODE CONTROL
26BD	UCH SYNCHRONISATION / CARD READER SIGNAL
26BG	UCH DATA / CARD READER SIGNAL
26BH	+ CARD READER
26BK	- CARD READER
26I	+ STEERING COLUMN LOCK
26J	CONTROL - SAFETY HALL SENSOR
26M	ENGINE RUNNING WARNING LIGHT CONTROL
26N	ENGINE START/STOP + SIGNAL
26P	DOOR HANDLE INFRARED SENSOR +
26Q	PASSENGER SIDE DOOR HANDLE INFRARED SENSOR SIGNAL

# LIST OF CONNECTIONS

CONNECTION CODES	CONNECTION TITLES
26S	DRIVER'S SIDE REAR HANDLE INFRARED SENSOR SIGNAL
26T	DRIVER'S HANDLE INFRARED SENSOR SIGNAL
26X	CLUTCH - SIGNAL
26Z	AUTOMATIC TRANSMISSION NEUTRAL + SIGNAL
27A	HANDBRAKE WARNING LIGHT - CONTROL
28A	OIL PRESSURE WARNING LIGHT - CONTROL
2JD	ALTERNATOR FEED +
2K	ALTERNATOR CHARGER SIGNAL
30A	BRAKE FLUID LEVEL WARNING LIGHT - CONTROL
32A	OIL LEVEL SENSOR SIGNAL 2
32B	OIL LEVEL SENSOR SIGNAL 1
34A	LEFT HAND REAR LOUDSPEAKER + SIGNAL
34AM	WAVE SEPARATOR AERIAL AMPLIFIER +
34AN	AM/FM AERIAL SIGNAL
34AP	RADIO SATELLITE SIGNAL L0
34AQ	RADIO SATELLITE SIGNAL L1
34AR	RADIO SATELLITE SIGNAL L2
34AS	RADIO SATELLITE IN0 SIGNAL
34AT	RADIO SATELLITE IN1 SIGNAL
34AU	RADIO SATELLITE IN2 SIGNAL
34AZ	COMPACT DISC BUS SIGNAL 1
34B	LEFT HAND REAR LOUDSPEAKER - SIGNAL
34BA	COMPACT DISC BUS SIGNAL 2
34BB	- COMPACT DISC BUS
34BC	COMPACT DISC + BATTERY
34BD	+ COMPACT DISC ACCESSORIES
34BG	COMPACT DISC AUDIO SIGNAL
34BH	- AUDIO 1 COMPACT DISC
34BK	- AUDIO 2 COMPACT DISC
34BL	COMPACT DISC SHIELDING
34BM	+ COMPACT DISC REMOTE CONTROL
34BN	- COMPACT DISC REMOTE CONTROL
34BP	+ COMPACT DISC INFRARED ACCESSORIES
34BQ	COMPACT DISC STOP/START CONTROL
34BR	RADIO CAN H SHUNT SIGNAL
34BS	RADIO CHANNEL SHUNT SIGNAL
34C	RIGHT HAND REAR LOUDSPEAKER - SIGNAL
34D	RIGHT HAND REAR LOUDSPEAKER + SIGNAL
34DR	RADIO CANH SIGNAL
34DS	RADIO CANL SIGNAL
34DZ	MULTIMEDIA 1 CAN H SIGNAL
34E	RIGHT HAND FRONT LOUDSPEAKER + SIGNAL
34F	RIGHT HAND FRONT LOUDSPEAKER - SIGNAL
34G	LEFT HAND FRONT LOUDSPEAKER + SIGNAL
34GA	MULTIMEDIA 1 CAN L SIGNAL
34GB	MULTIMEDIA 2 CAN H SIGNAL
34GC	MULTIMEDIA 2 CAN L SIGNAL
34GD	COMMUNICATION START/STOP SIGNAL 1
34H	LEFT HAND FRONT LOUDSPEAKER - SIGNAL
34S	I2C RADIO (TYPE OF RADIO) DATA BUS (INTERFACE) SIGNAL
34T	I2C RADIO (TYPE OF RADIO) CLOCK SIGNAL
34U	I2C RADIO (TYPE OF RADIO) MARKING SIGNAL
34V	I2C RADIO (TYPE OF RADIO) EARTH SCREENING SIGNAL

# LIST OF CONNECTIONS

CONNECTION CODES	CONNECTION TITLES
34Z	RADIO OPERATING SIGNAL
36A	REAR WIPER + CONTROL
36C	REAR SCREEN WIPER PARK POSITION SWITCH - SIGNAL
37AA	PRE-HEATER PLUG 2 CONTROL
37AB	PRE-HEATER PLUG 3 CONTROL
37AC	PRE-HEATER PLUG 4 CONTROL
37Z	PRE-HEATER PLUG 1 CONTROL
38AH	FAN MOTOR SPEED 1 + CONTROL
38AJ	FAN MOTOR SPEED 2 + CONTROL
38AK	FAN MOTOR SPEED 3 + CONTROL
38AL	FAN MOTOR SPEED 4 + CONTROL
38DA	HEATING FAN ASSEMBLY + CONTROL > AIR CONDITIONING PANEL
38DB	HEATER BLOWER + CONTROL > AIR CONDITIONING PANEL
38ES	AIR CONDITIONING WARNING LIGHT - CONTROL
38GX	SUN SENSOR SIGNAL
38GZ	INTERIOR TEMPERATURE SENSOR SIGNAL
38JA	RECIRCULATION MOTOR CONTROL 1
38JB	RECIRCULATION MOTOR CONTROL 2
38JN	SUN TEMPERATURE HUMIDITY SENSOR ZERO VOLTS
38JU	PASSENGER COMPARTMENT HEATING RESISTANCE CONTROL RELAY 1
38JV	PASSENGER COMPARTMENT HEATING RESISTANCE CONTROL RELAY 2PASSENGER
38KY	AIR DISTRIBUTION MOTOR B2 COIL CONTROL
38KZ	AIR DISTRIBUTION MOTOR A2 COIL CONTROL
38LA	AIR DISTRIBUTION MOTOR B1 COIL CONTROL
38LB	AIR DISTRIBUTION MOTOR A1 COIL CONTROL
38LC	AIR MIXER MOTOR B2 COIL CONTROL
38LD	AIR MIXER MOTOR A2 COIL CONTROL
38LG	AIR MIXER MOTOR B1 COIL CONTROL
38LH	AIR MIXER MOTOR A1 COIL CONTROL
38LL	PASSENGER COMPARTMENT HEATING RESISTANCE / RELAY 1 CONTROL
38LM	PASSENGER COMPARTMENT HEATING RESISTANCE CONTROL / RELAY 2
38LP	AIR CONDITIONING STOP/START CONTROL
38LQ	FAN ASSEMBLY SPEED 0 SIGNAL
38LR	PASSENGER COMPARTMENT FAN SET SPEED 2 CONTROL
38R	AIR CONDITIONING CLUTCH + CONTROL
38U	RHEOSTAT CURSOR
38X	REFRIGERANT GAS PRESSURE SENSOR SIGNAL
38Y	REFRIGERANT GAS PRESSURE SENSOR +
39A	HEADLIGHT WASHER PUMP + CONTROL
39C	HEADLIGHT WASHER PUMP MOTOR CONTROL
39G	HEADLIGHT WASHERS RELAY 1 + CONTROL
39H	HEADLIGHT WASHERS RELAY 2 + CONTROL
3AA	INJECTION LOCKING RELAY COIL - CONTROL
3ABS	TURBO UPSTREAM TEMPERATURE SENSOR + SIGNAL
3ABT	- TURBO UPSTREAM TEMPERATURE SENSOR
3AC	FUEL PUMP RELAY COIL - CONTROL
3AJB	THROTTLE MOTOR + CONTROL
3AJC	THROTTLE MOTOR - CONTROL
3AT	TURBOCHARGER PRESSURE SOLENOID VALVE CONTROL
3B	AIR TEMPERATURE SENSOR + SIGNAL
3BB	CANISTER BLEED SOLENOID VALVE
3BG	ENGINE SPEED SIGNAL > TDC SENSOR
3BL	ENGINE SPEED > TDC SENSOR - SIGNAL

# LIST OF CONNECTIONS

CONNECTION CODES	CONNECTION TITLES
3BR	IGNITION INJECTOR PUMP +
3BS	IGNITION COIL CONTROL
3C	COOLANT TEMPERATURE SENSOR + SIGNAL
3CK	UNIT 2 SENSOR -
3CP	INJECTION COMPUTER CONTROL > IGNITION POWER MODULE 2-3
3CQ	CAMSHAFT SENSOR SIGNAL
3CR	INJECTOR 1 - CONTROL
3CS	INJECTOR 2 - CONTROL
3CT	INJECTOR 3 - CONTROL
3CU	INJECTOR 4 - CONTROL
3CV	INJECTOR 1 & 4 IGNITION COIL - CONTROL
3CW	INJECTOR 2 & 3 IGNITION COIL - CONTROL
3CZ	INJECTION COMPUTER CONTROL > 1 4 IGNITION POWER MODULE
3DQ	PINKING SENSOR -
3DU	AIRFLOW SENSOR -
3DV	AIRFLOW SENSOR + SIGNAL
3DW	AIRFLOW SENSOR - SIGNAL
3EL	EGR POTENTIOMETER + SIGNAL
3F	ATMOSPHERIC PRESSURE SENSOR SIGNAL
3FAB	FUEL TEMPERATURE + SIGNAL
3FB	INJECTION + > PROTECTIVE RELAY
3FB1	INJECTION + > PROTECTIVE RELAY
3FB2	INJECTION + > PROTECTIVE RELAY
3FF	PRE-HEATER RELAY - CONTROL
3FJ	INJECTION COMPUTER SENSOR -
3FX	CRUISE CONTROL ON>OFF - CONTROL
3FY	PRE-HEATER RELAY DIAGNOSTIC SIGNAL
3GB	EGR SOLENOID VALVE -
3GC	EGR SENSOR +
3GF	UPSTREAM OXYGEN SENSOR HEATER - CONTROL
3GG	DOWNSTREAM OXYGEN SENSOR HEATER - CONTROL
3GH	UPSTREAM OXYGEN SENSOR EARTH
3GJ	DOWNSTREAM OXYGEN SENSOR EARTH
3GK	UPSTREAM OXYGEN SENSOR SIGNAL
3GL	DOWNSTREAM OXYGEN SENSOR SIGNAL
3HF	LIQUEFIED PETROLEUM GAS ECU SOLENOID VALVE RELAY - CONTROL
3HI	FUEL PRESSURE CONTROL SOLENOID VALVE - CONTROL
3HQ	LPG PRESSURE RELIEF SOLENOID VALVE + CONTROL > COMPUTER
3JA	ADDITIONAL HEATER 1 RELAY COIL CONTROL
3JAA	ADDITIONAL HEATER 2 RELAY COIL CONTROL
3JB	ADDITIONAL HEATER PLUG 1 + CONTROL
3JC	ADDITIONAL HEATER PLUG 2 + CONTROL
3JD	ADDITIONAL HEATER PLUG 3 + CONTROL
3JK	COOLANT TEMPERATURE -
3JM	EGR SOLENOID VALVE -
3JQ	AIR TEMPERATURE -
3JZ	LIQUEFIED PETROLEUM GAS INJECTOR + CONTROL
3KG	INLET FLAP SOLENOID VALVE - CONTROL
3KJ	AIRFLOW +
3KQ	AIR TEMPERATURE SIGNAL
3KW	INJECTOR 1 CONTROL
3KX	INJECTOR 2 CONTROL
3KY	INJECTOR 3 CONTROL

# LIST OF CONNECTIONS

CONNECTION CODES	CONNECTION TITLES
3KZ	INJECTOR 4 CONTROL
3L	+ INJECTOR 1
3LA	+ INJECTOR 2
3LB	+ INJECTOR 3
3LC	+ INJECTOR 4
3LD	FUEL TEMPERATURE SENSOR -
3LG	ATMOSPHERIC PRESSURE SENSOR +
3LN	TURBOCHARGER PRESSURE SENSOR -
3LP	TURBOCHARGER PRESSURE SENSOR + SIGNAL
3LQ	TURBOCHARGER PRESSURE SENSOR +
3LR	+ LOAD POTENTIOMETER 1
3LS	LOAD POTENTIOMETER 1 + SIGNAL
3LT	- LOAD POTENTIOMETER 1
3LU	+ LOAD POTENTIOMETER 2
3LV	- LOAD POTENTIOMETER 2
3LW	LOAD POTENTIOMETER 2 + SIGNAL
3LX	RAIL FUEL PRESSURE SENSOR +
3LY	RAIL FUEL PRESSURE SENSOR + SIGNAL
3LZ	RAIL FUEL PRESSURE SENSOR -
3MG	TURBO PRESSURE SOLENOID VALVE - CONTROL
3MN	MOTORISED THROTTLE POTENTIOMETER + 5 VOLTS
3MO	MOTORISED THROTTLE POTENTIOMETER SENSOR -
3MP	MOTORISED THROTTLE POTENTIOMETER 1 SIGNAL
3MQ	MOTORISED THROTTLE POTENTIOMETER 2 SIGNAL
3MS	ENGINE CAN H SIGNAL
3MT	ENGINE CAN L SIGNAL
3N	FUEL PUMP +
3NU	LIQUEFIED PETROLEUM GAS PRESSURE SENSOR +
3NV	LIQUEFIED PETROLEUM GAS PRESSURE SENSOR SIGNAL
3NW	LIQUEFIED PETROLEUM GAS PRESSURE SENSOR -
3PC	CAMSHAFT SHIFTER CONTROL
3PD	SPEED LIMITER ON/OFF CONTROL
3PL	BANK A>B CAMSHAFT SENSOR EARTH
3QX	LIQUEFIED PETROLEUM GAS INJECTOR 1 - CONTROL
3QY	LIQUEFIED PETROLEUM GAS INJECTOR 2 - CONTROL
3QZ	LIQUEFIED PETROLEUM GAS INJECTOR 3
3RA	LIQUEFIED PETROLEUM GAS INJECTOR 4 - CONTROL
3RB	LIQUEFIED PETROLEUM GAS ACTUATOR CONTROL RELAY
3RC	LIQUEFIED PETROLEUM GAS ON/OFF SIGNAL
3RD	LIQUEFIED PETROLEUM GAS GAUGE SENDER SIGNAL
3S	PINKING SENSOR 1 + SIGNAL > FRONT
3SM	MOTOR 2 CAN H SIGNAL
3SN	MOTOR 2 CAN L SIGNAL
3SV	INLET CAMSHAFT SENSOR SIGNAL
3SX	- INLET CAMSHAFT SENSOR
3SZ	VARIABLE INLET CAMSHAFT CONTROL
3TD	PARTICLE FILTER UPSTREAM TEMPERATURE SENSOR SIGNAL
3TG	PARTICLE FILTER DOWNSTREAM TEMPERATURE SENSOR SIGNAL
3TK	POLLEN FILTER UPSTREAM PRESSURE SENSOR -
3TL	PARTICLE FILTER DIFFERENTIAL PRESSURE SIGNAL
3VG	TURBOCHARGER COOLANT PUMP RELAY CONTROL
3VH	+ TURBOCHARGER BEARING COOLANT PUMP
3VK	LPG TANK SOLENOID VALVE CONTROL

# LIST OF CONNECTIONS

CONNECTION CODES	CONNECTION TITLES
3VM	AIR INTAKE FLAP FAULT FINDING
3VN	CONTROL - AIR INTAKE FLAP
3VP	CONTROL + GAS RECIRCULATION MOTOR
3VQ	CONTROL - GAS RECIRCULATION MOTOR
3WP	LPG TANK SOLENOID VALVE RELAY CONTROL
3WT	WATER IN DIESEL DETECTION SENSOR SIGNAL
3WU	WATER IN DIESEL DETECTION - SENSOR
3WV	- FLOWMETER
3XC	- NATURAL GAS PRESSURE SENSOR URBAN DRIVING
3YB	LIQUID PETROLEUM GAS GAUGE 5 V SIGNAL
3YC	- OIL VAPOUR REHEATER
40A	DRIVER'S REAR VIEW MIRROR RIGHT>LEFT CONTROL
40B	PASSENGER REAR VIEW MIRROR UP/DOWN CONTROL
40C	DRIVER'S REAR VIEW MIRROR UP/DOWN CONTROL
40D	PASSENGER REAR VIEW MIRROR RIGHT>LEFT CONTROL
40E	REAR VIEW MIRROR MOTOR COMMON
40W	REAR-VIEW MIRROR FOLD IN CONTROL
40X	REAR-VIEW MIRROR FOLD OUT CONTROL
41A	FUEL LEVEL SENDER + SIGNAL
41B	FUEL LEVEL -
46AA	NAVIGATION LOUDSPEAKER + SIGNAL
46AB	NAVIGATION LOUDSPEAKER - SIGNAL
46AD	NAVIGATION ON/OFF CONTROL
46AZ	NAVIGATION AUDIO + SIGNAL
46BA	NAVIGATION AUDIO - SIGNAL
46BB	NAVIGATION CAN H SIGNAL 1
46BC	NAVIGATION CAN L SIGNAL
46BG	- DISPLAY 1
46BH	- DISPLAY 2
46BK	- DISPLAY 3
46BL	NAVIGATION SHUNT H SIGNAL
46BM	NAVIGATION SHUNT L SIGNAL
46CB	NAVIGATION AERIAL SIGNAL
46G	DISPLAY GREEN VIDEO SIGNAL > COMPUTER
46H	DISPLAY BLUE VIDEO SIGNAL > COMPUTER
46K	DISPLAY VIDEO RED SIGNAL > COMPUTER
46L	VIDEO DISPLAY ZERO VOLTS SIGNAL > COMPUTER
46M	DISPLAY 1 + > COMPUTER
46N	DISPLAY 2 + > COMPUTER
46Y	BRIGHTNESS + CONTROL
47C	EXTERNAL TEMPERATURE SENSOR + SIGNAL
47D	EXTERNAL TEMPERATURE SENSOR ZERO VOLTS SIGNAL
47F	VEHICLE SPEED SIGNAL
47Q	OIL TEMPERATURE SENSOR + SIGNAL
47Z	EXTERNAL TEMPERATURE / DISPLAY SIGNAL
49B	FAN + CONTROL
49G	FAN HIGH SPEED RELAY + CONTROL
49L	FAN LOW SPEED RESISTANCE + CONTROL
49Q	- FAN HIGH SPEED CONTROL RELAY
49R	FAN HIGH SPEED FEED
4AQ	ELECTRONIC STABILITY PROGRAM ON/OFF SWITCH - CONTROL
4BZ	YAW SENSOR TEST SIGNAL (DIRECTIONAL STABILITY)
4C	LEFT HAND FRONT WHEEL SENSOR SIGNAL

# LIST OF CONNECTIONS

CONNECTION CODES	CONNECTION TITLES
4CV	YAW SENSOR REFERENCE SIGNAL (DIRECTIONAL STABILITY)
4CW	YAW SENSOR SIGNAL (DIRECTIONAL STABILITY)
4CX	LATERAL ACCELERATION SENSOR SIGNAL
4CY	YAW SENSOR - (DIRECTIONAL STABILITY) > LATERAL ACCELERATION
4DM	ANTI-LOCK BRAKING SYSTEM UPPER CAN SIGNAL
4DN	ANTI-LOCK BRAKING SYSTEM LOWER CAN SIGNAL
4E	LEFT HAND FRONT WHEEL SENSOR +
4G	LEFT HAND REAR WHEEL SENSOR SIGNAL
4GJ	BRAKE LIGHTS ON CONTROL RELAY
4H	LEFT HAND REAR WHEEL SENSOR +
4M	RIGHT HAND FRONT WHEEL SENSOR SIGNAL
4N	RIGHT HAND FRONT WHEEL SENSOR +
4S	RIGHT HAND REAR WHEEL SENSOR SIGNAL
4T	RIGHT HAND REAR WHEEL SENSOR +
52D	DIGITAL CONTROL EARTH
52G	1-BIT DIGITAL CONTROL
52H	2-BIT DIGITAL CONTROL
52J	3-BIT DIGITAL CONTROL
58D	DISPLAY ON/OFF SIGNAL
5A	BRAKE PEDAL SWITCH + SIGNAL
5AU	SEQUENCE SOLENOID VALVE +
5AV	SEQUENCE SOLENOID VALVE 1 -
5AW	SEQUENCE SOLENOID VALVE 2 -
5AX	SEQUENCE SOLENOID VALVE 3 -
5AY	SEQUENCE SOLENOID VALVE 4 -
5AZ	SEQUENCE SOLENOID VALVE 5 -
5BA	MODULATING SOLENOID VALVE +
5BB	SEQUENCE SOLENOID VALVE 6 -
5BC	PRESSURE SOLENOID VALVE 1 -
5BX	BRIDGING MODULATING SOLENOID VALVE
5CQ	AUTOMATIC GEARBOX DISPLAY SIGNAL
5DA	GEARBOX INPUT SPEED SENSOR + SIGNAL
5DB	GEARBOX INPUT SPEED SENSOR - SIGNAL
5DD	EXCHANGER FLOW SENSOR CONTROL SOLENOID VALVE +
5DG	MULTIFUNCTION SWITCH SIGNAL 2
5DH	MULTIFUNCTION SWITCH SIGNAL 3
5DJ	MULTIFUNCTION SWITCH SIGNAL 4
5DK	MULTIFUNCTION SWITCH - > AUTOMATIC TRANSMISSION COMPUTER
5DL	MODULATING SOLENOID VALVE 3
5DM	MODULATING SOLENOID VALVE 4
5DN	EXCHANGER FLOW SENSOR SOLENOID VALVE - CONTROL
5DU	GEAR LEVER LOCKING - CONTROL
5FM	LOWER CONTACT MULTIFUNCTION PUSH BUTTON CONTROL
5H	N+1 PUSH BUTTON CONTROL
5U	LINE PRESSURE SENSOR +
5V	LINE PRESSURE SENSOR -
5W	LINE PRESSURE SENSOR + SIGNAL
60AF	PASSENGER'S SIDE SATELLITE + SIGNAL
60AG	DRIVER'S SIDE FRONT SATELLITE + SIGNAL
60AH	DRIVER'S SIDE SATELLITE - SIGNAL
60AJ	PASSENGER'S SIDE FRONT SATELLITE - SIGNAL
60AK	DRIVER'S LAP STRAP PRETENSIONER + CONTROL
60AL	DRIVER'S LAP STRAP PRETENSIONER - CONTROL



# LIST OF CONNECTIONS

CONNECTION CODES	CONNECTION TITLES
60AM	LEVEL 1 DRIVER'S FRONT AIR BAG + CONTROL
60AN	LEVEL 1 DRIVER'S FRONT AIR BAG - CONTROL
60AP	LEVEL 2 DRIVER'S FRONT AIR BAG + CONTROL
60AQ	LEVEL 2 DRIVER'S FRONT AIR BAG - CONTROL
60AR	DRIVER'S SIDE THORAX AIR BAG + CONTROL
60AS	- DRIVER'S SIDE THORAX AIR BAG CONTROL
60AV	DRIVER'S SIDE REAR INERTIA REEL PRETENSIONER + CONTROL
60AW	DRIVER'S SIDE REAR INERTIA REEL PRETENSIONER - CONTROL
60AX	LEFT HAND REAR SIDE AIR BAG + CONTROL
60AY	DRIVER'S SIDE REAR SIDE THORAX AIR BAG - CONTROL
60AZ	PASSENGER LAP BELT PRETENSIONER + CONTROL
60B	PASSENGER'S PRETENSIONER + SIGNAL
60BA	PASSENGER LAP BELT PRETENSIONER - CONTROL
60BB	PASSENGER'S SIDE THORAX AIR BAG + CONTROL
60BC	PASSENGER'S SIDE THORAX AIR BAG - CONTROL
60BG	PASSENGER'S SIDE REAR INERTIA REEL PRETENSIONER + CONTROL
60BH	PASSENGER'S SIDE REAR INERTIA REEL PRETENSIONER - CONTROL
60BK	PASSENGER'S SIDE REAR SIDE THORAX AIR BAG + CONTROL
60BL	PASSENGER'S SIDE REAR SIDE AIR BAG - CONTROL
60BP	DRIVER'S SEAT POSITION SIGNAL
60BY	DRIVER'S HEAD CURTAIN AIR BAG + CONTROL
60BZ	DRIVER'S HEAD CURTAIN AIR BAG - CONTROL
60C	PASSENGER'S PRETENSIONER _ SIGNAL
60CA	PASSENGER'S HEAD CURTAIN AIR BAG + CONTROL
60CB	PASSENGER'S HEAD CURTAIN AIR BAG - CONTROL
60CL	DRIVER'S SEAT POSITION EARTH
60D	DRIVER'S PRETENSIONER + SIGNAL
60DS	PASSENGER AIR BAG INHIBITOR KEY SIGNAL
60DT	- PASSENGER AIR BAG INHIBITOR KEY
60DU	DRIVER'S SEATBELT WARNING SIGNAL
60DV	DRIVER'S SEATBELT WARNING EARTH
60E	DRIVER'S PRETENSIONER - SIGNAL
60H	PASSENGER EURO BAG + SIGNAL
60K	PASSENGER'S FRONT AIR BAG LEVEL 1 - CONTROL
60L	LEVEL 2 PASSENGER'S FRONT AIR BAG + CONTROL
60M	LEVEL 2 PASSENGER'S FRONT AIR BAG - CONTROL
64C	LEFT HAND TURN SIGNAL LIGHTS CONTROL
64D	RIGHT HAND TURN SIGNAL LIGHTS CONTROL
64F	HAZARD WARNING LIGHTS INDICATOR LIGHT + CONTROL
64Q	FLASHER UNIT TIMER - CONTROL
65A	BRAKE LIGHTS + CONTROL
65G	BRAKE LIGHT CONTROL > RELAY
67A	HORN + CONTROL
79F	HEATED SEAT WARNING LIGHT CONTROL
79K	LEFT HAND HEATED SEAT RELAY + CONTROL
79L	RIGHT HAND HEATED SEAT RELAY + CONTROL
79M	DRIVER'S HEATED SEAT COVER CONTROL
79N	PASSENGER HEATED SEAT COVER CONTROL
79P	RIGHT-HAND HEATED SEAT COVER CONTROL
79Q	LEFT-HAND HEATED SEAT COVER CONTROL
80A	BONNET SWITCH - SIGNAL
80D	ULTRASONIC SENSOR SIGNAL
80DA	DRIVER'S SIDE FRONT ULTRASOUND DETECTION SIGNAL

# LIST OF CONNECTIONS

CONNECTION CODES	CONNECTION TITLES
80E	ALARM STANDBY WARNING LIGHT CONTROL
80FC	SIREN CONTROL FEED
80FD	ALARM RELAY CONTROL
80T	ENGINE IMMOBILISER WARNING LIGHT - CONTROL
86D	DECLUTCH + SIGNAL
86G	CRUISE CONTROL PROGRAMMING CONTROL
86M	CRUISE CONTROL PROGRAMMING RETURN SIGNAL
87A	LEFT HAND REAR 1st POSITION SWITCH - SIGNAL
87B	RIGHT HAND REAR 1st POSITION SWITCH - SIGNAL
87G	PASSENGER'S 1st POSITION SWITCH - SIGNAL
87H	DRIVER'S 1st POSITION SWITCH - SIGNAL
87T	BOOT LID POSITION SWITCH 1 SIGNAL
8E	+ FRONT LEFT-HAND FOG LIGHTS > RESISTANCE
8F	+ FRONT RIGHT-HAND FOG LIGHTS > RESISTANCE
9P	PROTECTED REAR FOG LIGHTS + CONTROL
A1	+ AFTER IGNITION ELECTRIC WINDOW FUSE > RELAY
AP11	PROTECTED + AFTER IGNITION REVERSING LIGHTS FUSE
AP15	PROTECTED + AFTER IGNITION ENGINE FUNCTIONS FUSE
AP1A	ROOF FUSE PROTECTED + AFTER IGNITION
AP30	PROTECTED + AFTER IGNITION PASSENGER ELECTRIC WINDOW FUSE
AP31	PROTECTED + AFTER IGNITION LPG COMPUTER FUSE
AP4	PROTECTED + AFTER IGNITION AUTOMATIC TRANSMISSION FUSE
AP43	PROTECTED + AFTER IGNITION FUSE
AP44	POWER ASSISTED STEERING ECU + AFTER IGNITION FEED FUSE PROTECTION
APCB	+ AFTER IGNITION PROTECTED / COLUMN LOCK FUSE CONTACT CLOSED AT REST
BCP3	PROTECTED + BATTERY FEED CIRCUIT BREAKER INTERIOR LIGHT FUSE
BP11	PROTECTED + BATTERY FEED > PASSENGER COMPARTMENT 1
BP12	PROTECTED + BATTERY FEED > PASSENGER COMPARTMENT 2
BP14	PROTECTED + BATTERY FEED > ABS
BP25	PROTECTED + BATTERY FEED REAR SCREEN WIPER
BP27	PROTECTED + BATTERY FEED > ENGINE FUNCTIONS
BP3	PROTECTED + BATTERY FEED ELECTRIC DOOR LOCKING
BP31	PROTECTED + BATTERY FEED INJECTOR FUSE > FUEL PUMP
BP32	PROTECTED + BATTERY FEED HORN FUSE
BP35	PROTECTED + BATTERY FEED PRE-HEATER UNIT FUSE
BP42	PROTECTED + BATTERY FEED > AUTOMATIC TRANSMISSION COMPUTER
BP48	PROTECTED + BATTERY FEED > ELECTRIC WINDOW
BP55	DRIVER'S ONE-TOUCH ELECTRIC WINDOW FUSE PROTECTED + BATTERY FEED
BP70	PROTECTED + BATTERY FEED > PASSENGER'S ONE-TOUCH FRONT ELECTRIC WINDOW FUSE
BP73	PROTECTED + BATTERY FEED FAN FUSE
BP77	BATTERY PROTECTED + FEED > UCH
BP8	PROTECTED + BATTERY FEED > ANTI-LOCK BRAKING SYSTEM MOTOR
BP81	PROTECTED + BATTERY FEED > ELECTRIC POWER-ASSISTED STEERING
BP87	REAR ELECTRIC WINDOWS FUSE PROTECTED + BATTERY FEED
BP9	PROTECTED + BATTERY FEED ADDITIONAL HEATER FUSE
BP91	PROTECTED + BATTERY FEED ADDITIONAL HEATER FUSE
BP93	+ BATTERY PROTECTED SUNROOF
BPDA	PROTECTED + BATTERY FEED > ALTERNATOR STARTING
BPR1	+ BATTERY FEED > RELAY
BPS1	+ BATTERY SAFETY PROTECTED
BPT	PROTECTED + BATTERY FEED TIMER
BPT2	+ BATTERY PROTECTED TIMED LIGHTING
CANH	DIAGNOSTIC CAN H SIGNAL

# LIST OF CONNECTIONS

CONNECTION CODES	CONNECTION TITLES
CANL	DIAGNOSTIC CAN L SIGNAL
CPD	PROTECTED RIGHT HAND DIPPED BEAM HEADLIGHT +
CPG	PROTECTED LEFT HAND DIPPED BEAM HEADLIGHT +
D	STARTER +
H66P	REVERSING LIGHTS + CONTROL
H7	REV COUNTER > TOP DEAD CENTRE > COIL > COMPUTER ALTERNATOR SIGNAL
HK	DIAGNOSTIC SIGNAL K
HK8	ADDITIONAL HEATER DIAGNOSTIC SIGNAL
LPD	PROTECTED RIGHT HAND SIDE LIGHT +
LPG	PROTECTED LEFT HAND SIDE LIGHT +
M	EARTH
MAH	ANTI-LOCK BRAKING SYSTEM ELECTRICAL EARTH
MAK	ADDITIONAL HEATING ELECTRICAL EARTH
MAL	ELECTRIC POWER ASSISTED STEERING EARTH STRAP
MAM	DASHBOARD LEFT-HAND CROSS MEMBER ELECTRICAL EARTH
MAN	DASHBOARD RIGHT-HAND CROSS MEMBER ELECTRICAL EARTH
MAO	DASHBOARD CROSS MEMBER RADIO EARTH
MAQ	REAR RIGHT-HAND END PANEL ELECTRICAL EARTH
MAS	FRONT LEFT-HAND SIDE MEMBER ELECTRONIC EARTH
MAW	REAR RIGHT-HAND WHEEL ARCH RADIO ELECTRICAL EARTH
ME	BODYWORK GENERAL ELECTRICAL EARTH
MZ	REAR END PANEL ELECTRICAL EARTH
N	ELECTRONIC EARTH
NAM	UPPER LEFT-HAND CROSS MEMBER ELECTRONIC EARTH
NAP	TUNNEL ELECTRONIC EARTH
RPD	RIGHT HAND PROTECTED MAIN BEAM HEADLIGHT +
RPG	LEFT HAND PROTECTED MAIN BEAM HEADLIGHT +
S	+ ACCESSORIES FEED
SP15	PROTECTED + ACCESSORIES FEED FUSE
SP16	PROTECTED + ACCESSORIES FEED / ACCESSORIES FEED FUSE SUPPLY
SP17	PROTECTED + ACCESSORIES FEED > BRAKE LIGHTS FUSE
SP2	PROTECTED + ACCESSORIES > RADIO
SP3	PROTECTED + ACCESSORIES > HEATER
TB1	PINKING SENSOR SCREENING BRAID
TB13	AM/FM AERIAL SHIELDING
TB15	NAVIGATION AERIAL SHIELDING
TB16	TELEPHONE AERIAL SHIELDING
XXXX	EMPTY CONNECTION