

6 Sealing and soundproofing

65 OPENING ELEMENT SEALING

KA0X

77 11 204 192

MARCH 1999

Edition Anglaise

"The repair methods given by the manufacturer in this document are based on the technical specifications current when it was prepared.

The methods may be modified as a result of changes introduced by the manufacturer in the production of the various component units and accessories from which his vehicles are constructed."


All copyrights reserved by Renault.

Copying or translating, in part or in full, of this document or use of the service part reference numbering system is forbidden without the prior written authority of Renault.



Renault 1999

EXPLODED VIEW

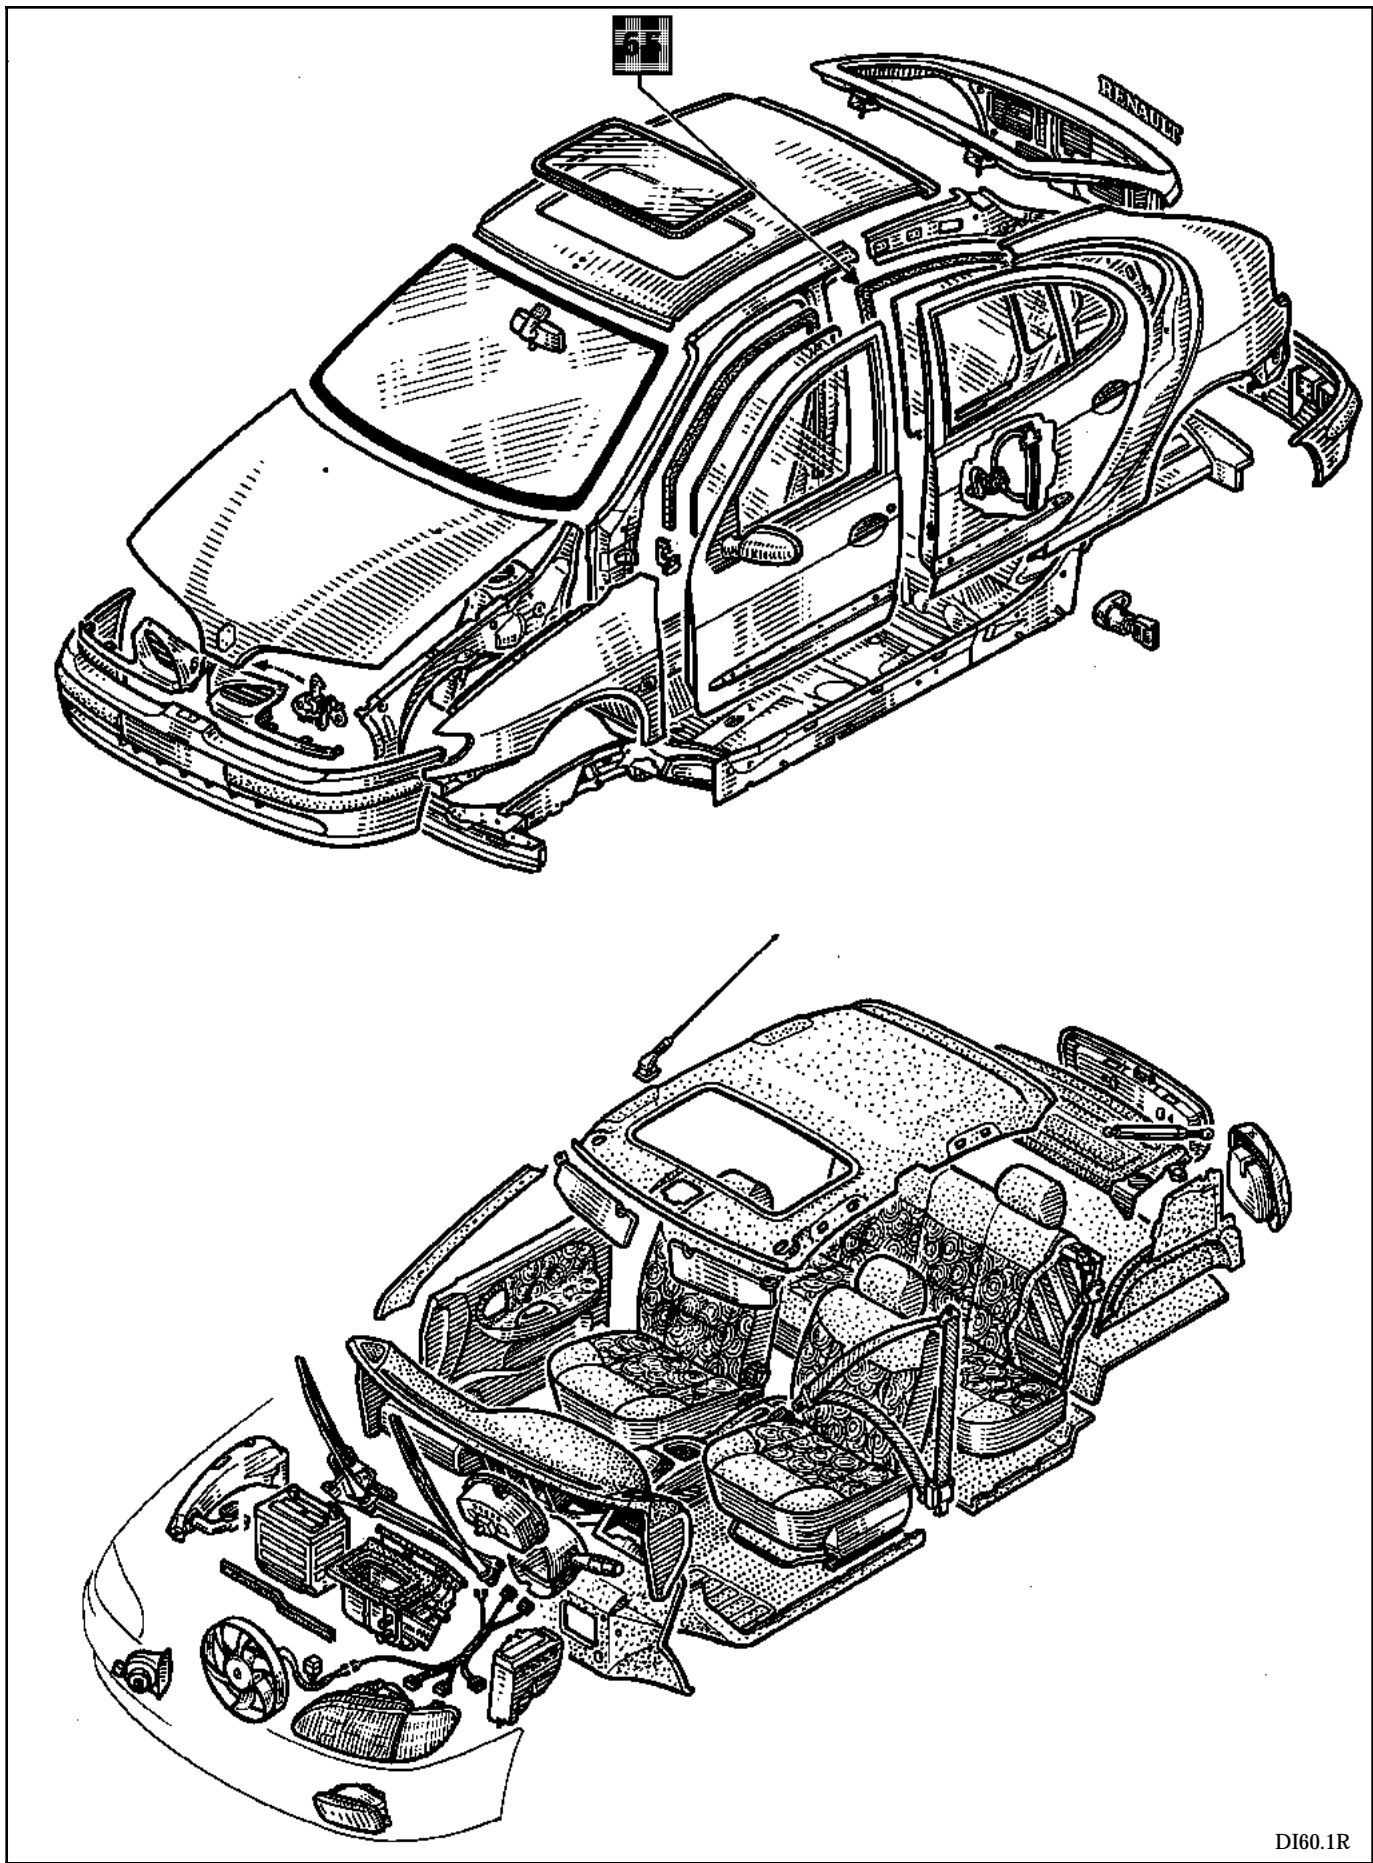

Sealing and soundproofing

Contents


Page

65	OPENING ELEMENT SEALING	
	Rear door pillar seal	65-1


OPENING ELEMENTS SEALING

Rear door pillar seal

65 A

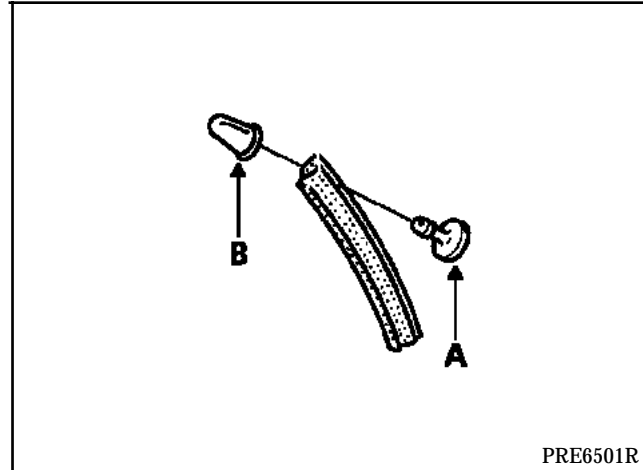

REMOVAL

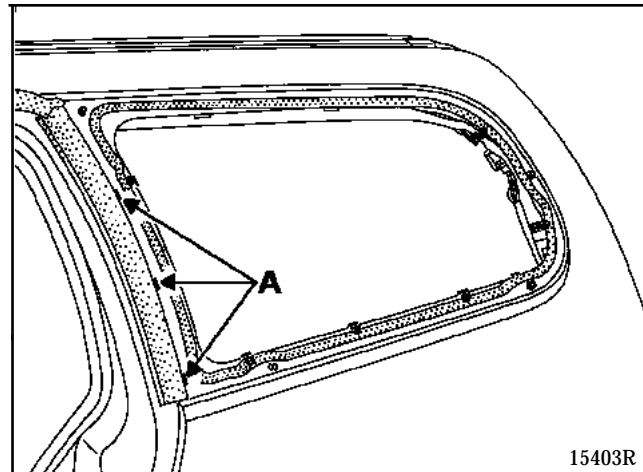

Remove the rear quarter panel window (see section 54C).

Using unpicking pliers, remove the three retaining clips (A).

Remove the seal.

NOTE : the retaining clips are located in plastic holders (B) mounted to the body.