

Mégane

7 Upholstery and trim

71 INTERIOR BODY TRIM

73 NON-SIDE OPENING ELEMENTS TRIM

KA0X

77 11 204 192

MARCH 1999

Edition Anglaise

"The repair methods given by the manufacturer in this document are based on the technical specifications current when it was prepared.

The methods may be modified as a result of changes introduced by the manufacturer in the production of the various component units and accessories from which his vehicles are constructed."


All copyrights reserved by Renault.

Copying or translating, in part or in full, of this document or use of the service part reference numbering system is forbidden without the prior written authority of Renault.



Renault 1999


EXPLODED VIEW

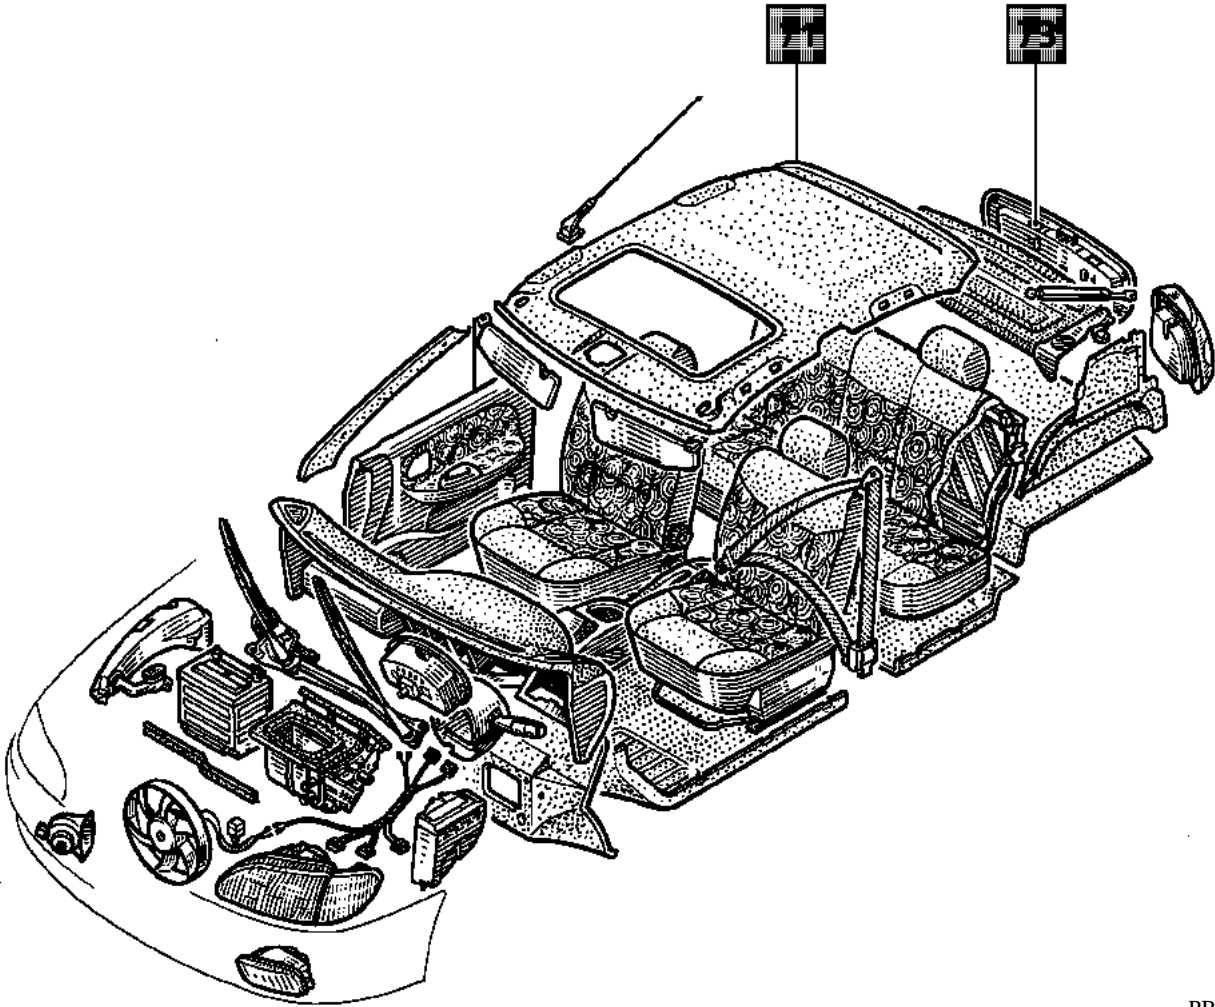


Upholstery and trim

Contents

	Page
71 INTERIOR BODY TRIM	
Boot carpet	71-1
Headlining	71-2
Front rear quarter panel lining	71-5
Rear rear quarter panel lining	71-6
Lower rear quarter panel lining	71-7
Wheel arch lining	71-8
73 NON-SIDE OPENING ELEMENTS TRIM	
Tailgate lining	73-1

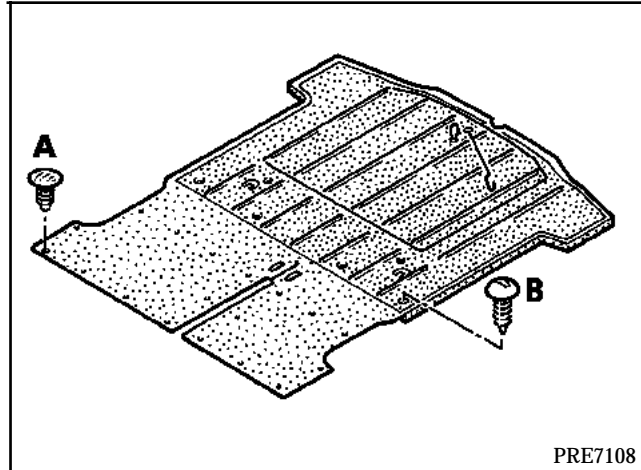


REMOVAL

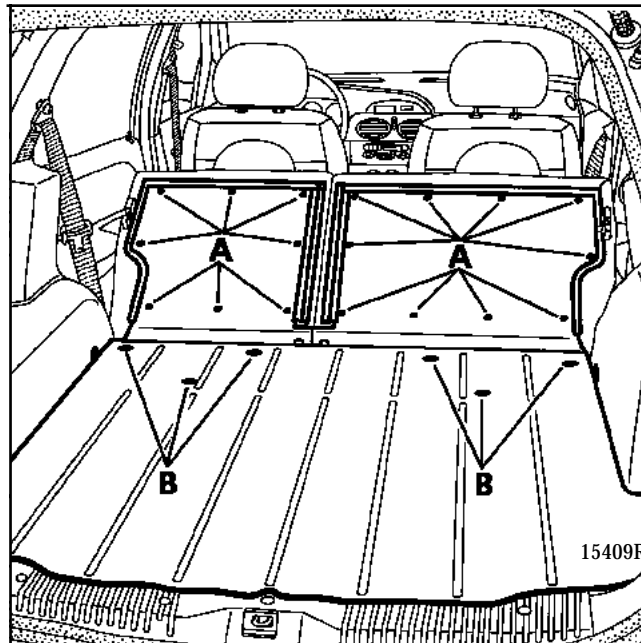

Tilt the rear seats forwards.

Use unpicking pliers to remove the retaining clips (A) and (B).

Remove the passenger compartment carpet.

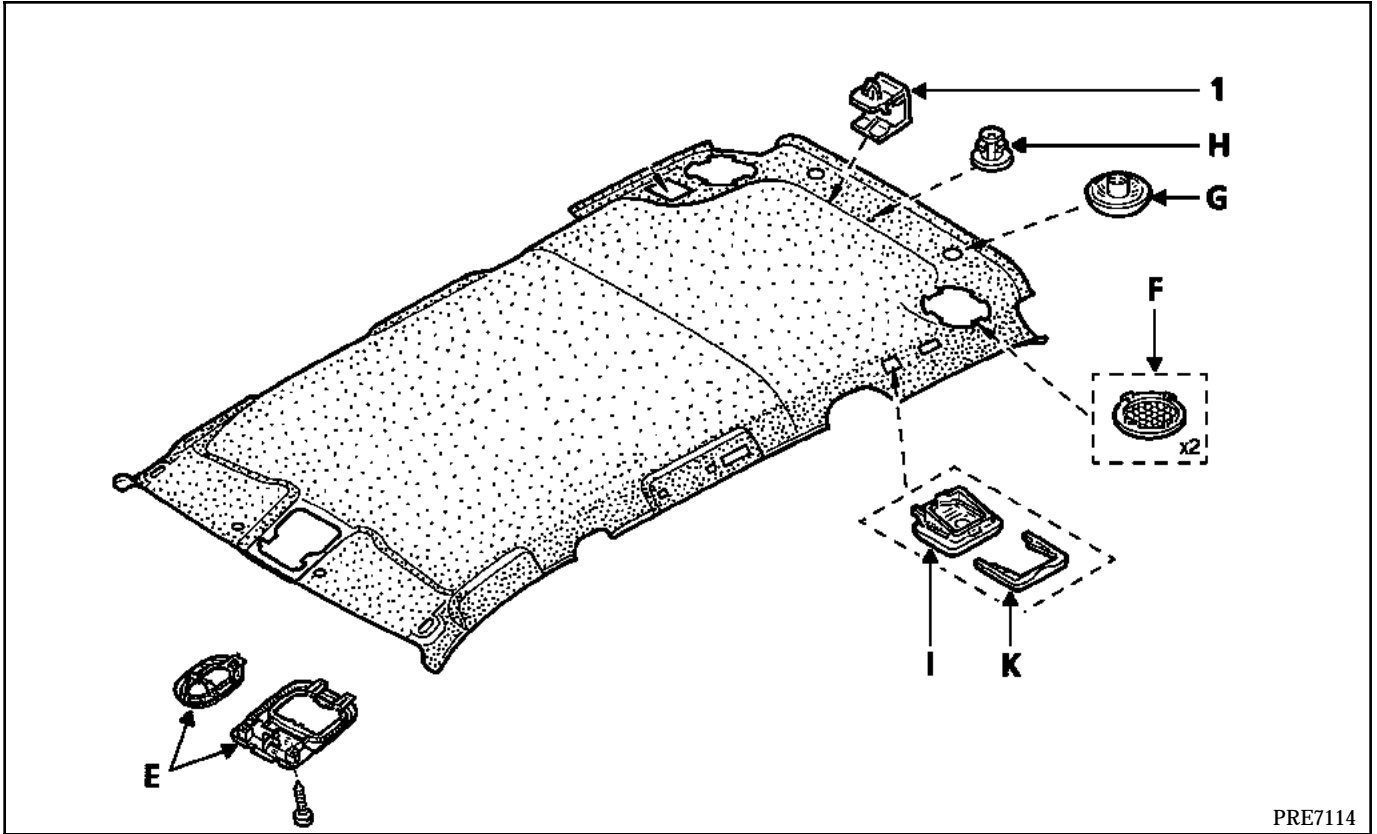


PRE7114

INTRODUCTION

This headlining is bonded to the roof using a single pot adhesive used for bonding windows.

The rear side edges of the headlining are held in place with velcro (1).


REMOVAL

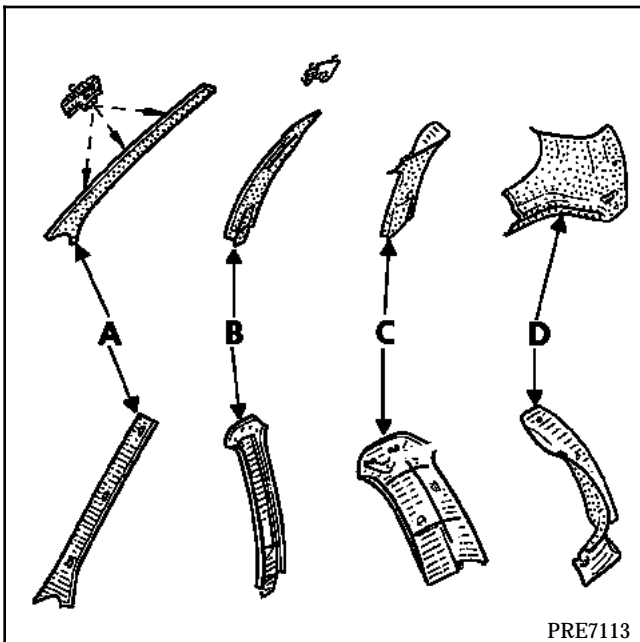

PRE7113

After removing the front and rear head restraints, protect the seats and remove:

- the four door seals,
- the boot seal,
- the windscreen pillar linings (A),
- the upper centre pillar linings (B),
- the front rear quarter panel linings (C) (see section 71C),
- the rear rear quarter panel linings (D) (see section 71D),
- the sun visors and their retaining clips,
- the grab handles and their blanking plugs for the driver's position,
- the roof console (E),
- the courtesy lights,
- the rear speaker grilles (F),
- the tailgate mounting plugs (G),
- the centre retaining clip (H),
- the third rear seat belt (see section 59B).

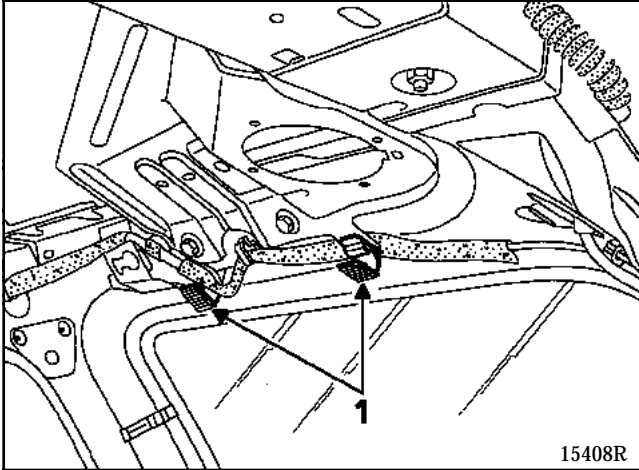


Gently pull the rear edges of the headlining to release the velcro strips at the side (1).

Using equipment for manually removing bonded windows (pulling handle, unpicking tool, cutting wire), working progressively from the front to the rear, cut the beads of adhesive between the headlining and the roof panel (two persons required for this operation).

Remove the headlining through the tailgate.

IMPORTANT: during this operation, take care not to cut the foam wedge at the rear of the cut-out for the roof console.

Do not fold the headlining during this operation if it is not to be renewed.

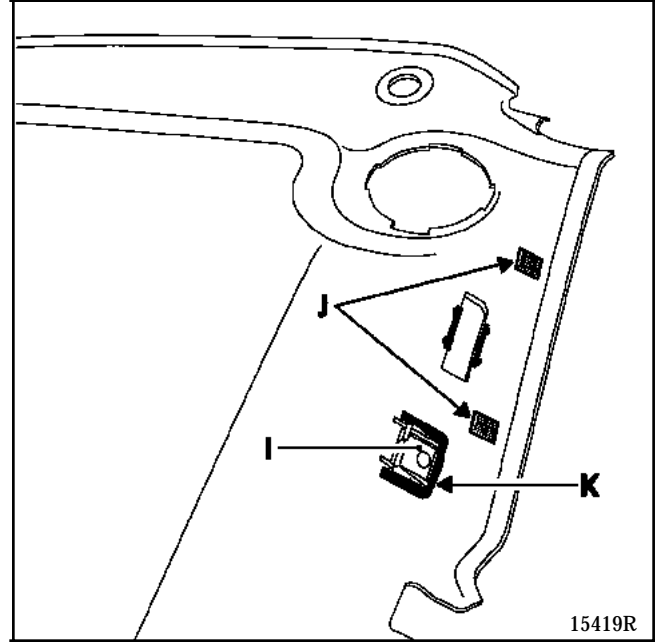

NOTES:

The headlining does not need to be released to remove the plugs (I).


Remove the surrounding trim and the rear clips and plugs to release the velcro strips " (J).

Pull the headlining slightly to one side.

Remove the stop (K).

Remove the blanking plug (I).

Flatten the beads of adhesive on the roof panel and on the headlining in the case of a removal / refitting operation using a cutting tool such as a mastic knife.

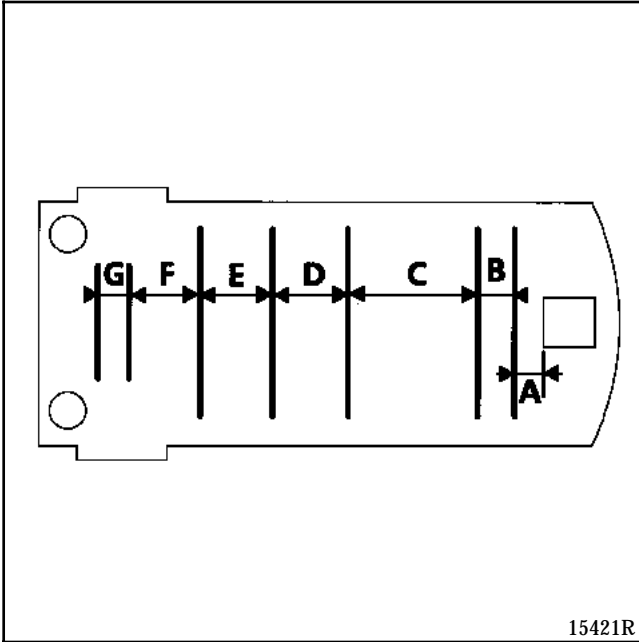

REFITTING

Apply adhesive to the headlining as shown opposite, observing the dimensions for positioning the beads of adhesive below:

A = 155 mm	B = 125 mm
C = 445 mm	D = 275 mm
E = 300 mm	F = 270 mm
G = 130 mm	

NOTE: Use a single pot polyurethane adhesive of the additional **310 ml** cartridge type.

Bring the headlining in through the tailgate.


Centre it in relation to the cut outs for the sun visors and the grab handles.

Flatten the headlining against the roof panel in the bonding areas at the rear side retaining clips (A) (see previous pages).

First fit the sun visor retaining clips and the rear tailgate mounting plugs (G) and (H) (see previous pages).


Refit the vehicle trim.

REMOVAL

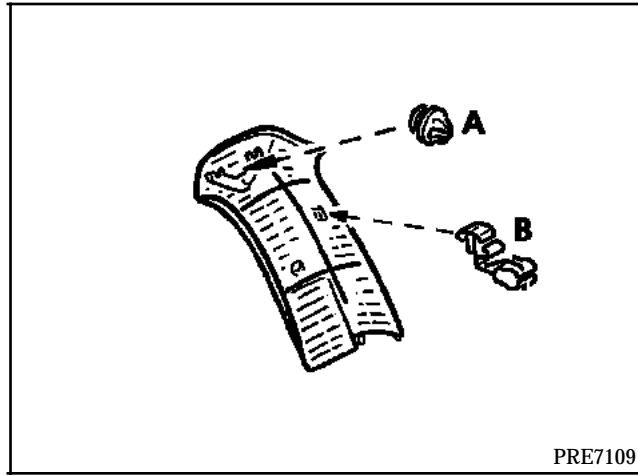

Remove:


- the upper seat belt mounting,
- the rear door seal (partially, in the area where it touches the lining).

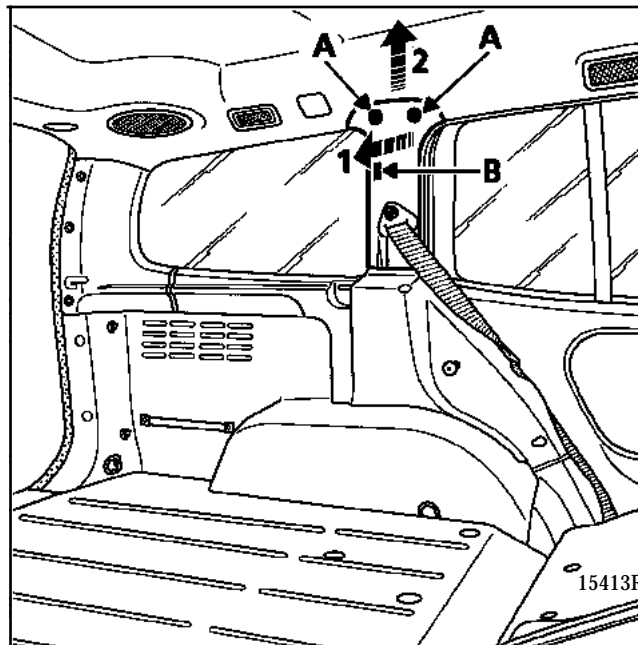

Unclip (1) the lining to release the clips (A) and clips (B).


Pull the lining (2) upwards to release it from its location on the lower rear quarter panel lining.

REMOVAL

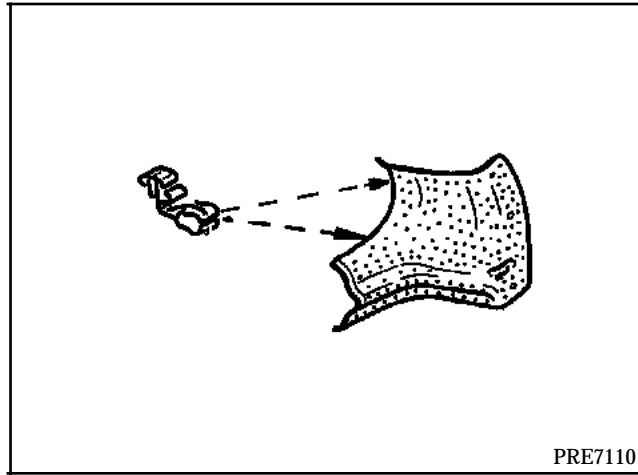

Remove:


- the rear door seal (partially, in the area where it touches the lining).

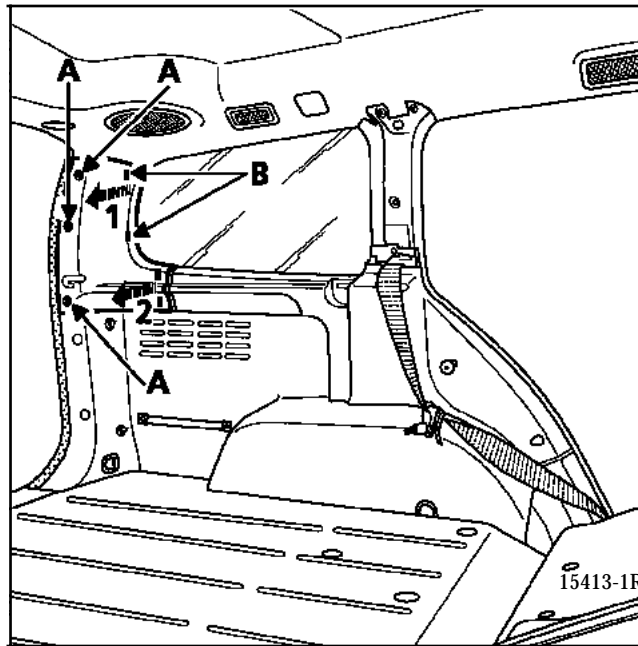

- the three mounting bolts (A).

Unclip the lining at (1) to release it from the lower rear quarter panel lining and at (2) to release the clips(B).


REMOVAL

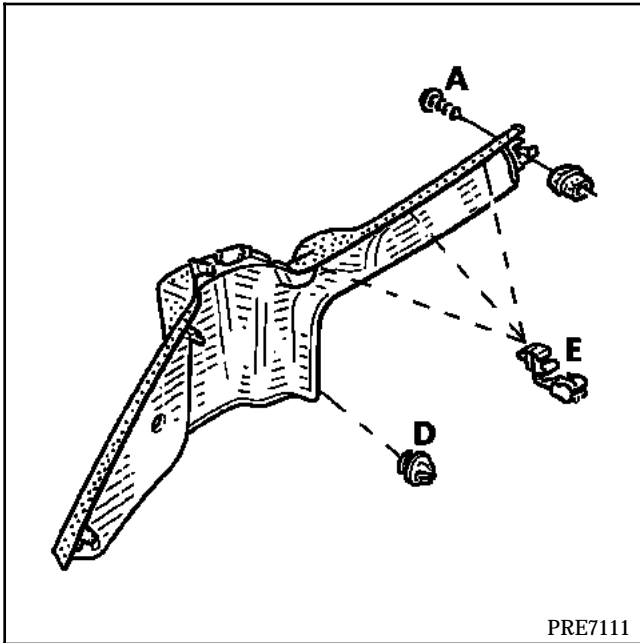

Tilt the rear seat forwards.

Remove:

- the rear door seal (partially, in the area where it touches the lining),
- the front rear quarter panel lining (see section 71C),
- the rear rear quarter panel lining (see section 71D),
- the rear seat striker plate,
- the centre shelf,

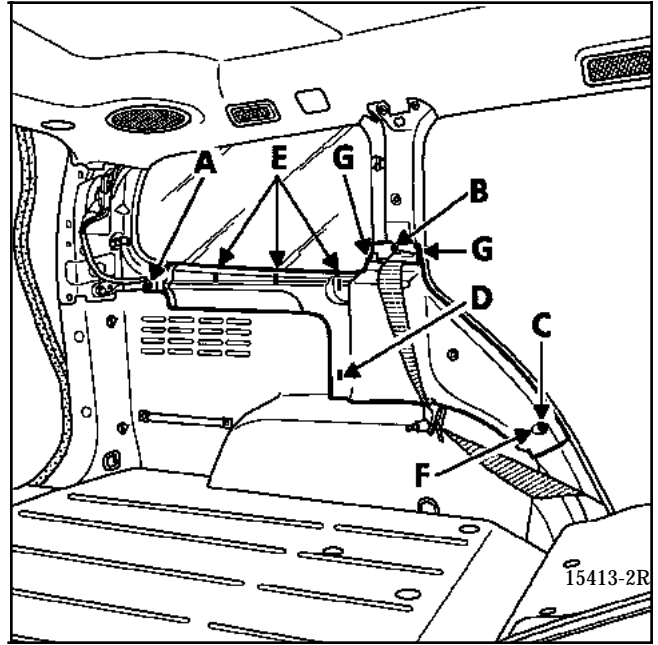


- the mounting bolts (A), (B) and (C).

Unclip the lining at (D) and (E) and (F).


Separate the two brackets (G) to remove the seat belt strap.

REMOVAL

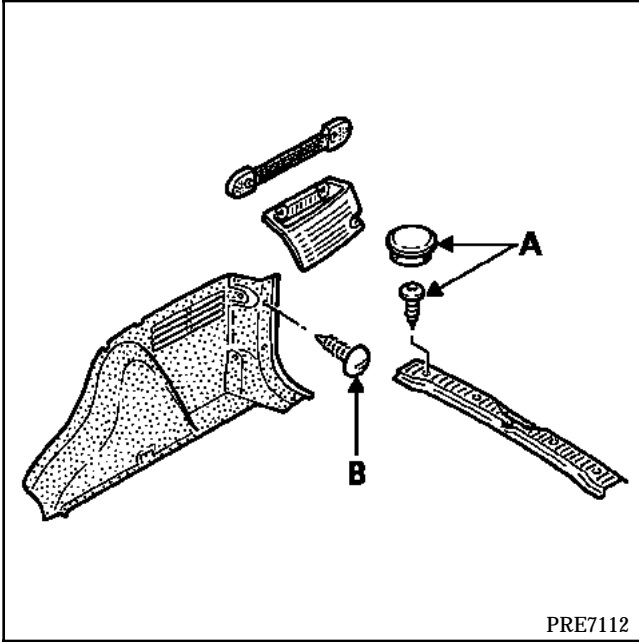


Remove:

- the front rear quarter panel lining (see section 71C),
- the rear rear quarter panel lining (see section 71D),
- the lower rear quarter panel lining (see section 71E),
- the compact disc player mounting (if fitted),

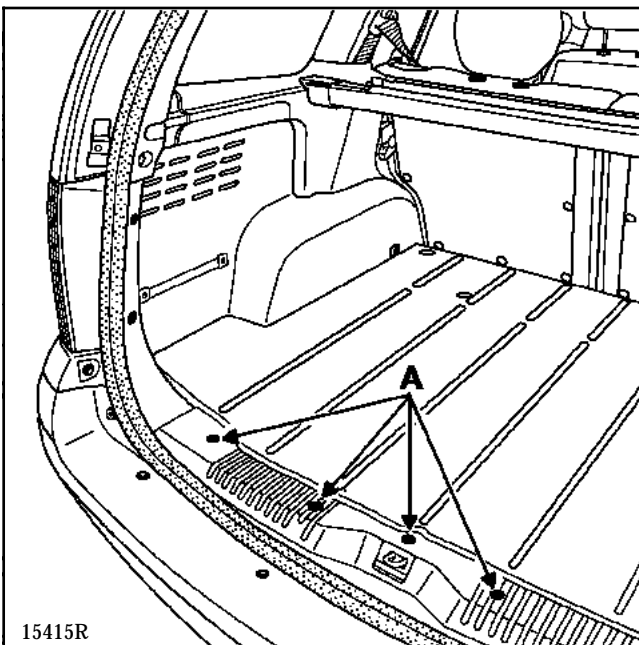

- the boot inner sill lining (covers and bolts (A)),

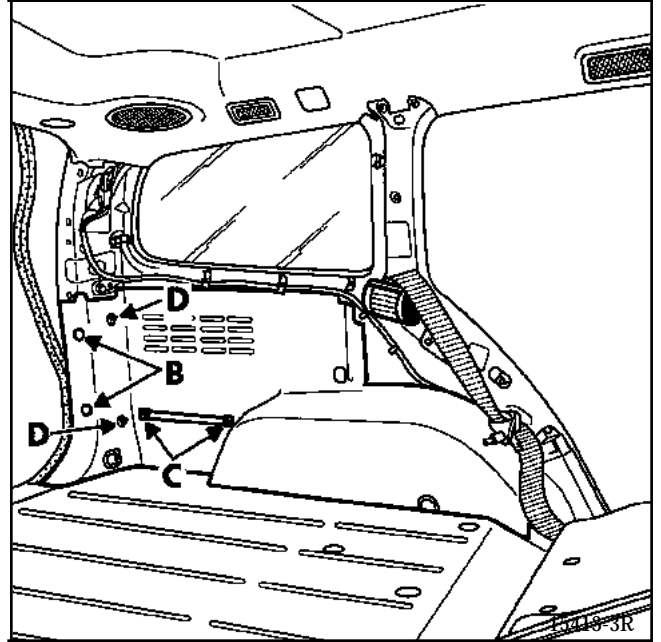


- clips (B) ; to do this, turn each clip a quarter turn using a flat blade screwdriver.


Unscrew:

- the two mounting bolts (C) for the can carrier strap,
- the two mounting nuts for the light (D).

Release the lining from its location under the boot carpet.

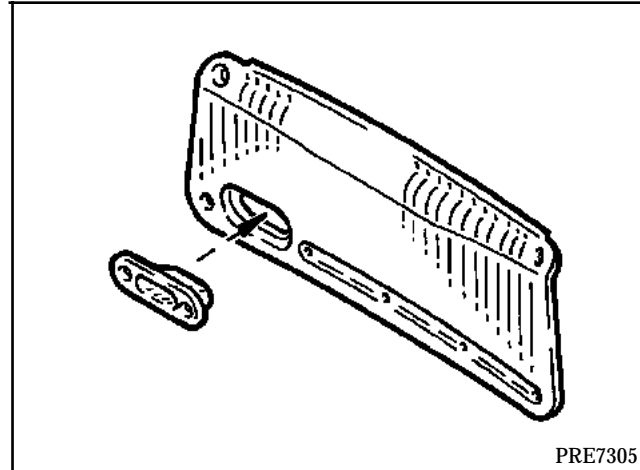

REMOVAL

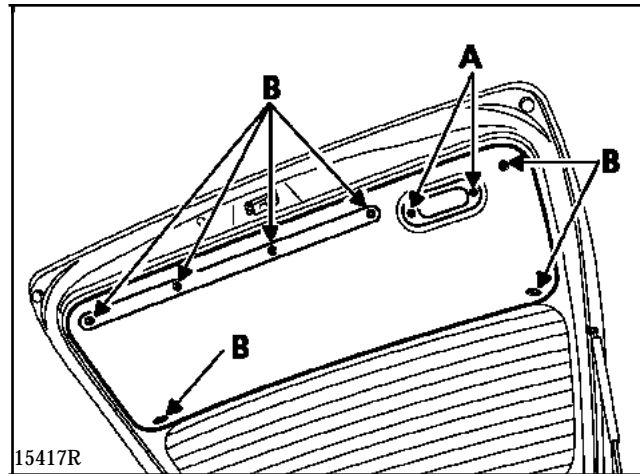

Remove:

- the two mounting bolts (A) for the closing handle,
- the retaining clips (B), (to remove these clips, turn each clip a quarter turn using a flat blade screwdriver),
- the lining.