

RENAULT

6 Sealing and soundproofing

64A BODYWORK SEALING

65A OPENING ELEMENT SEALING

66A WINDOW SEALING

68A SOUNDPROOFING

X84, and B84 or C84 or E84 or G84 or K84 or L84 or S84

77 11 318 162

SEPTEMBER 2005

Edition Anglaise

"The repair methods given by the manufacturer in this document are based on the technical specifications current when it was prepared.

The methods may be modified as a result of changes introduced by the manufacturer in the production of the various component units and accessories from which his vehicles are constructed."

All copyrights reserved by Renault.

The reproduction or translation in part or whole of the present document, as well as the use of the spare parts reference numbering system, are prohibited without the prior written consent of Renault.

Mégane II - Section 6

Contents

Page

64A BODYWORK SEALING

A-pillar seal: Removal - Refitting 64A-1

Retractable roof seal: Removal - Refitting 64A-3

65A OPENING ELEMENT SEALING

Front side door frame seal: Removal - Refitting 65A-1

Rear side door frame seal: Removal - Refitting 65A-2

Sunroof seal: Removal - Refitting 65A-4

66A WINDOW SEALING

Front side door interior weatherstrip: Removal - Refitting 66A-1

Front door side exterior weather strip: Removal - Refitting 66A-3

Rear side door exterior weather strip: Removal - Refitting 66A-4

68A SOUNDPROOFING

Bonnet soundproofing: Removal - Refitting 68A-1

BODYWORK SEALING

A-pillar seal: Removal - Refitting

64A

E84

Essential special tooling


Car. 1363 Set of trim removal levers.

REMOVAL

I - REMOVAL PREPARATION OPERATION

- ☐ Remove the windscreen pillar trims (see **A-pillar trim piece: Removal - Refitting**) (55A, Exterior protection).

II - OPERATION FOR REMOVAL OF PART CONCERNED

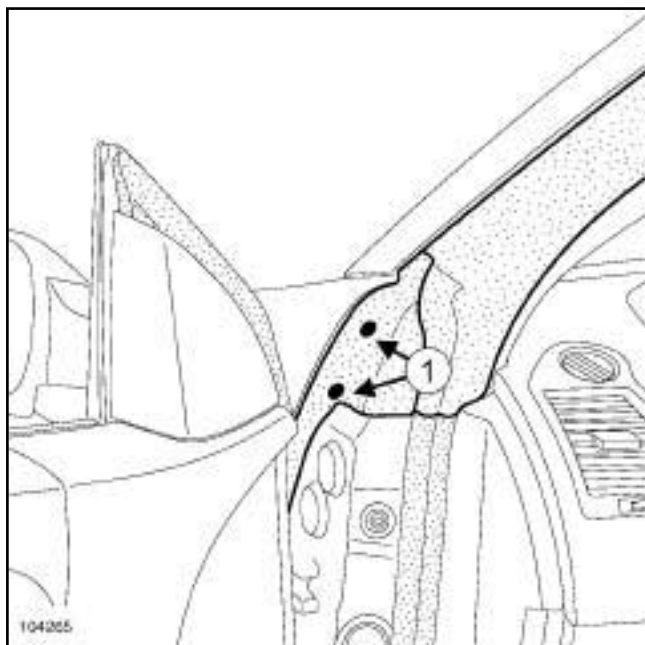


104265

- ☐ Unclip the clips (1) .
- ☐ Remove the windscreen pillar seals.

REFITTING

I - REFITTING PREPARATION OPERATION

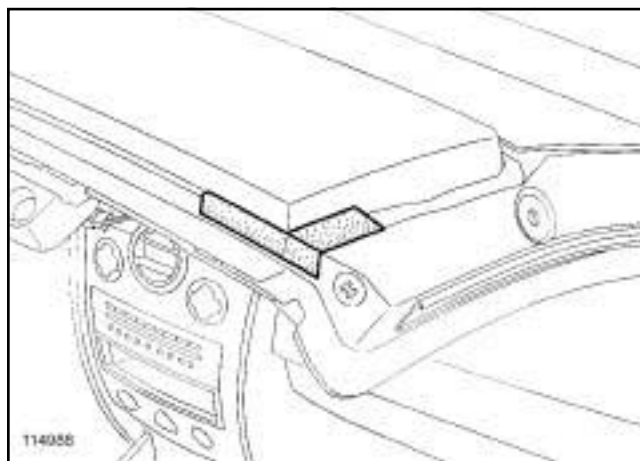

114988


- ☐ Always replace the strips of preformed mastic each time the windscreen pillar seal is removed.

BODYWORK SEALING

A-pillar seal: Removal - Refitting

64A

E84

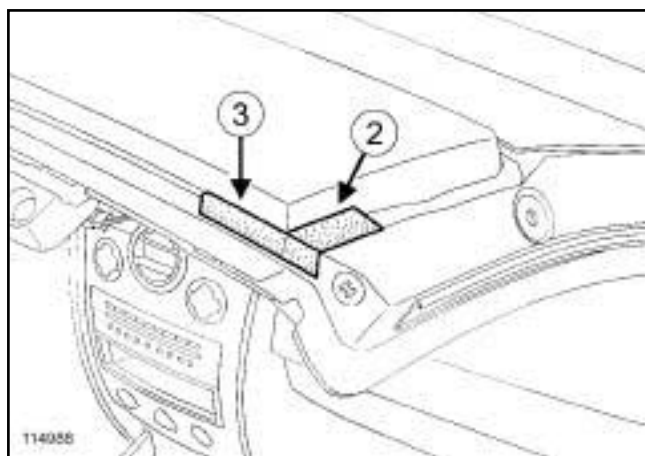

114988

- ☐ Clean the adhesive surface of the vehicle badge using a **LINT-FREE CLOTH** soaked in **HEPTANE** (see **Vehicle: Parts and ingredients for the repairwork**) (04B, Consumables - Products).
- ☐ Wipe the adhesive surface of the vehicle badge with a clean, dry **LINT-FREE CLOTH**.

☐

Note:

Do not touch the area after it has been cleaned.

- ☐ Remove:

- the white protection of the preformed mastic and apply it to the panelwork,
- the brown protection of the preformed mastic.

Note:

Do not touch the preformed mastic.


- ☐ Apply:

- a strip of preformed mastic (2) with a width of **20 mm** available from the **Parts Department**,
- a strip of preformed mastic (3) with a width of **10 mm** available from the **Parts Department**.

Note:

The preformed mastic (2) must pass under the preformed mastic (3) to ensure there is a perfect seal.

II - REFITTING OPERATION FOR PART CONCERNED

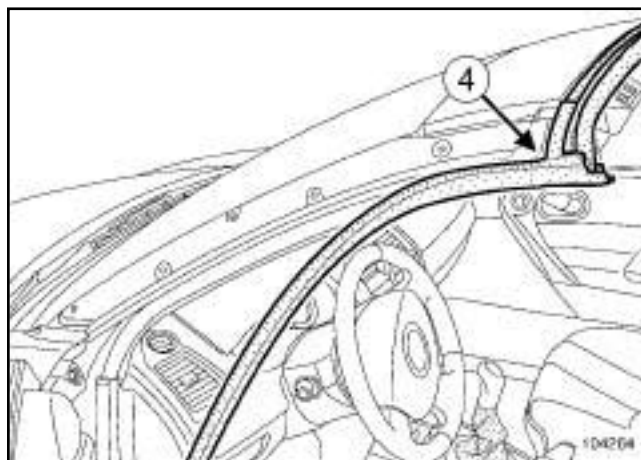

104264

- ☐ Position the seal in the corners (4) and in the locations provided, taking care to ensure that the small lip does not come into contact with the roof panel.
- ☐ Insert the seal fully into the groove using the tool (**Car. 1363**).
- ☐ Clip on the clips (1).

III - FINAL OPERATION

- ☐ Refit the windscreen pillar trims (see **A-pillar trim piece: Removal - Refitting**) (55A, Exterior protection).

BODYWORK SEALING

Retractable roof seal: Removal - Refitting

64A

E84

Essential special tooling


Car. 1363 Set of trim removal levers.

REMOVAL

I - REMOVAL PREPARATION OPERATION


- ☐ Partially open the retractable roof and lock it in the semi-open position.

II - OPERATION FOR REMOVAL OF PART CONCERNED

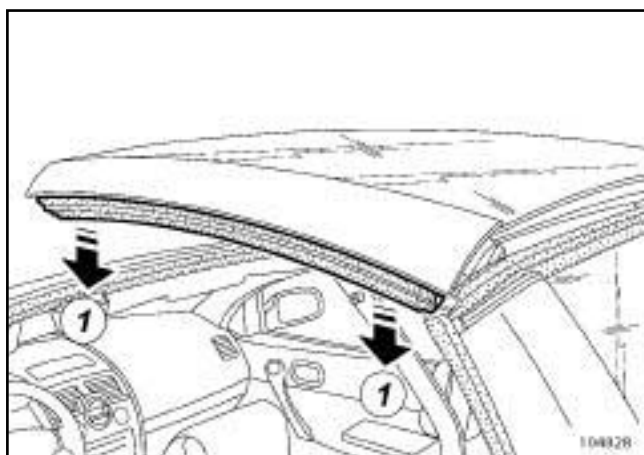


104828

- ☐ Remove the retractable roof side seal at (1) .

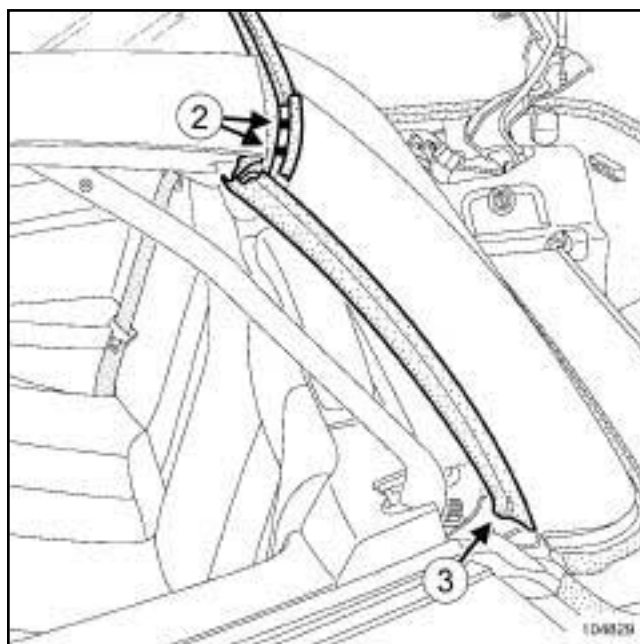

104829

- ☐ Remove the bolts (2) .
- ☐ Unclip the lower section of the retractable roof seal (3) .
- ☐ Remove the retractable roof seal.

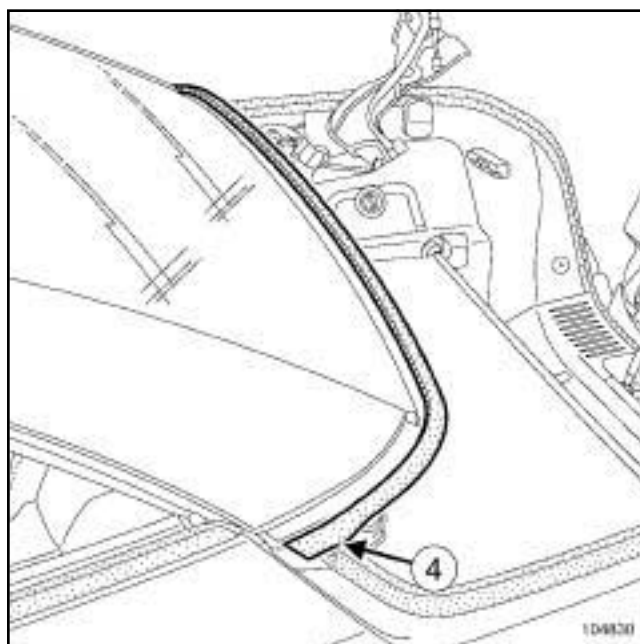

104830

- ☐ Unclip the ends of the retractable roof rear seal (4) .
- ☐ Remove the retractable roof rear seal.

BODYWORK SEALING


Retractable roof seal: Removal - Refitting

64A

E84

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

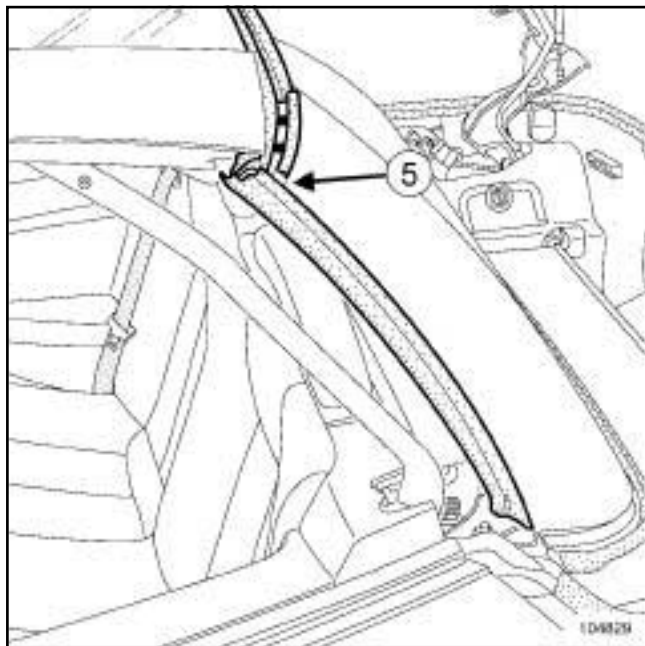

104829

- ☐ Position the side and rear seals of the retractable roof in the corners (5) .
- ☐ Insert the seal fully into the mounting groove using the tool (**Car. 1363**).
- ☐ Refit:
 - the bolts (2) ,
 - the side and rear seals of the retractable roof.

II - FINAL OPERATION

- ☐ Carry out a function test to check the sealing.

OPENING ELEMENT SEALING

Front side door frame seal: Removal - Refitting

65A


B84 or C84 or G84 or K84 or L84 or S84

Essential special tooling

Car. 1363 Set of trim removal levers.


REMOVAL

- ❑ Remove the door mirror (see **Door mirror: Removal - Refitting**) (MR 365, 56A, Exterior equipment).

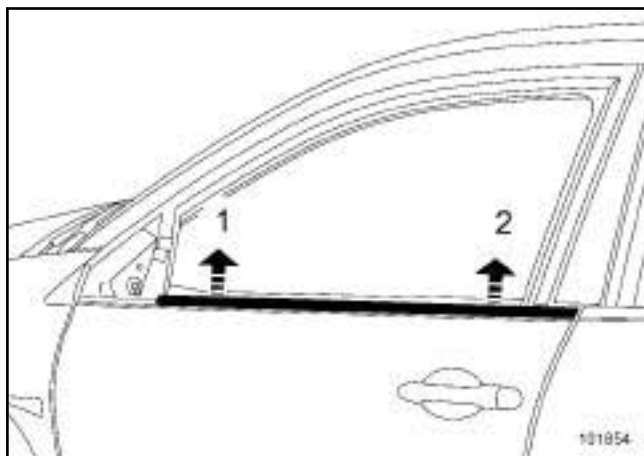

101854

- ❑ Carefully remove the weatherstrip in the direction of (1) and (2) using the (**Car. 1363**).

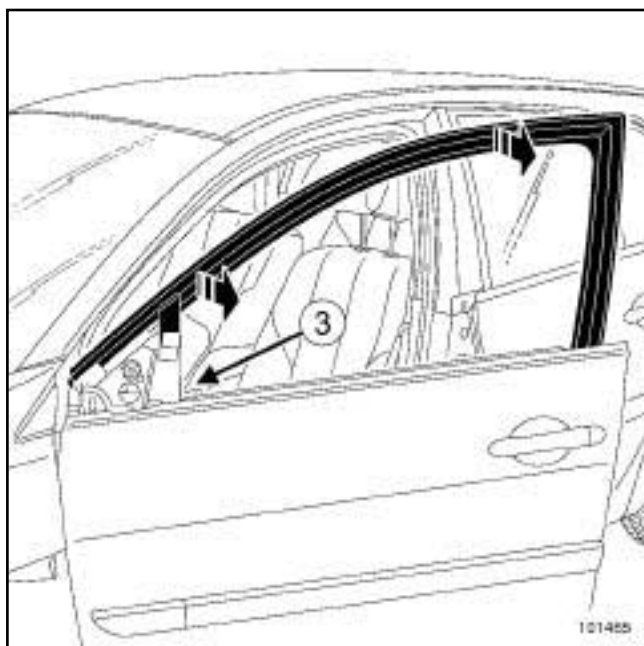

101465

- ❑ Remove seat runner seal (3) .
- ❑ Carefully unclip the door frame seal.

REFITTING



101464

- ❑ Position the seal.
- ❑ Fit the corner seal (4) making sure it slides in behind the panel (5) .
- ❑ Proceed in the reverse order to removal.


B84 or K84 or L84 or S84

Essential special tooling

Car. 1363 Set of trim removal levers.


REMOVAL

- ❑ Remove the door trim (see **Rear side door trim: Removal - Refitting**) (MR 365, 72A, Side opening elements trim).

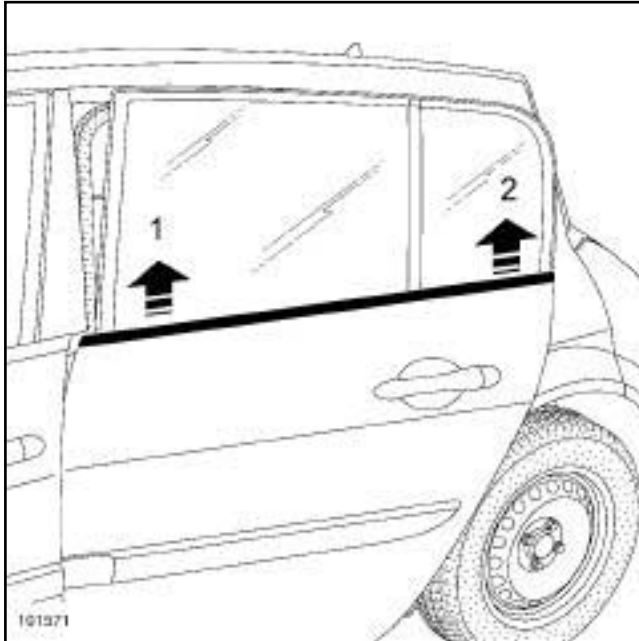


101571

- ❑ Undo the exterior weatherstrip (1) and (2) using the (Car. 1363).

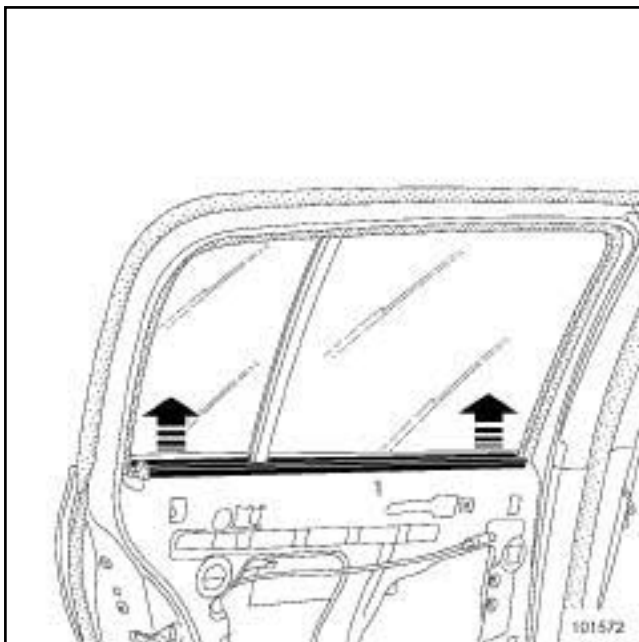


101572

- ❑ Remove the interior weatherstrip.

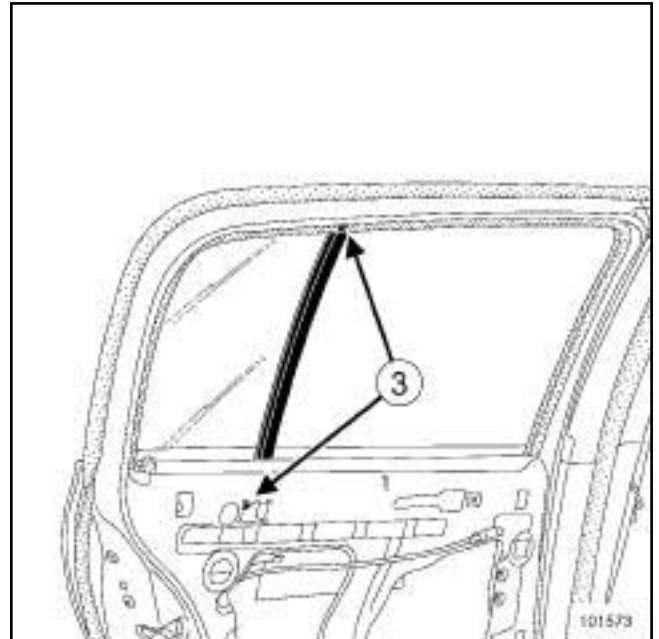

101573

- ❑ Remove:
 - the bolts (3) ,
 - the fixed upright channel.

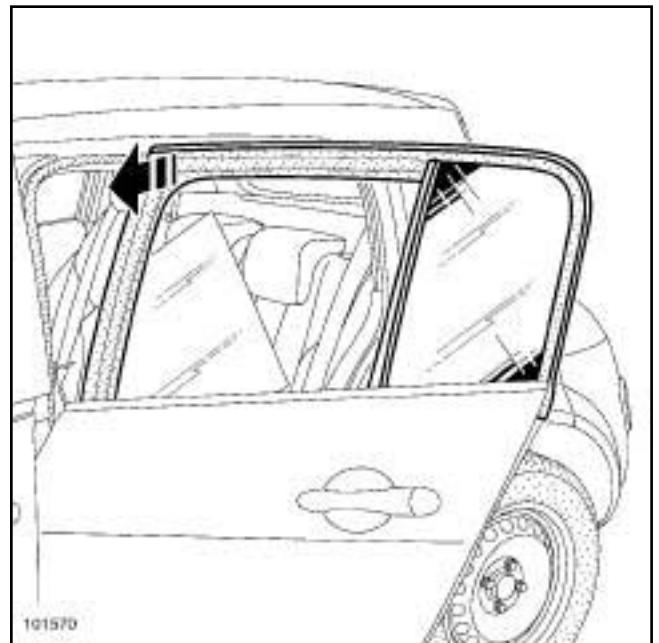

101570


- ❑ Unclip the front section of the seal.

OPENING ELEMENT SEALING

Rear side door frame seal: Removal - Refitting


65A

B84 or K84 or L84 or S84

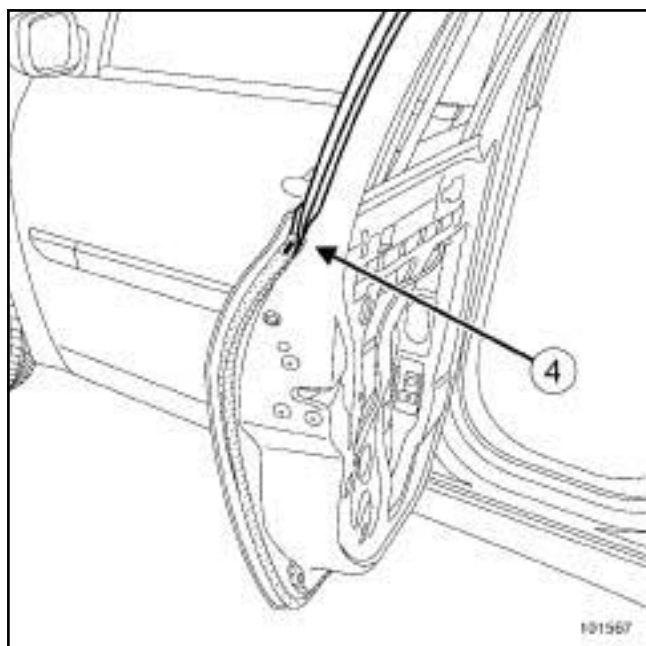

101567


- ❑ Unclip the upper clip from double seal (4) .

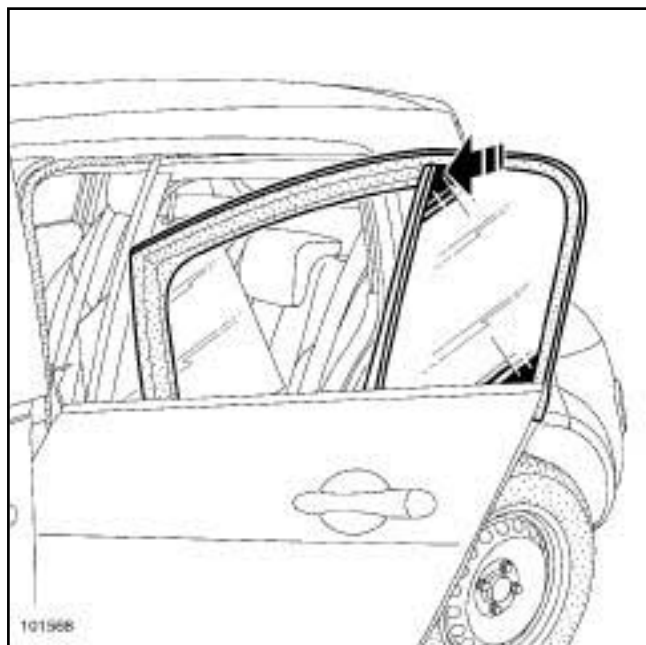

101568


- ❑ Remove the « seal and fixed window » assembly from the door.

REFITTING

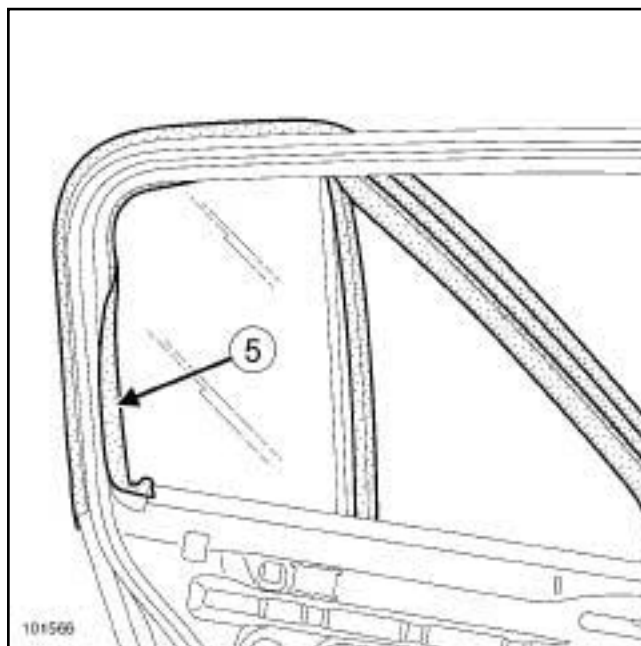

101566

- ❑ Fit the « seal and fixed window » assembly to the door.
- ❑ Clip in interior surface seal (5) .

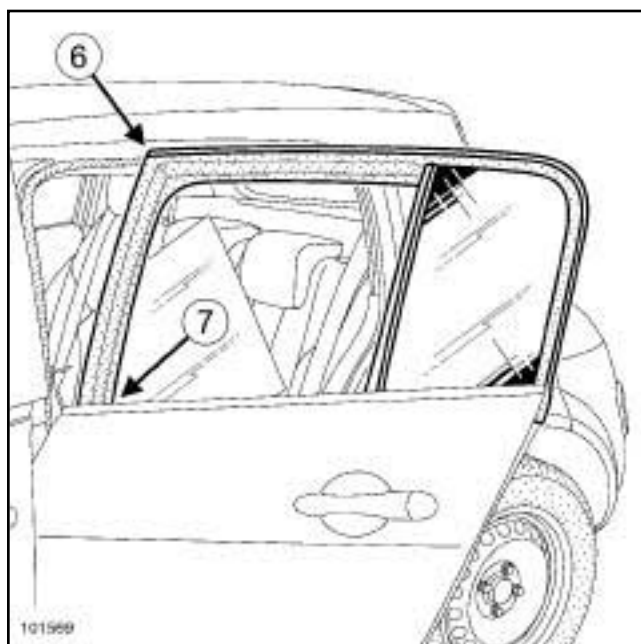

101569

- ❑ Position corner seal (6) .
- ❑ Fit the corner seal (6) making sure it slides in behind the panel (7) .
- ❑ Proceed in the reverse order to removal.

OPENING ELEMENT SEALING


Sunroof seal: Removal - Refitting

65A

B84 or C84 or K84 or L84

REPLACEMENT

- ❑ Remove the sunroof mobile panel (see **Sunroof moving panel: Removal - Refitting**) (MR 365, 52A, Non-side opening element mechanisms).

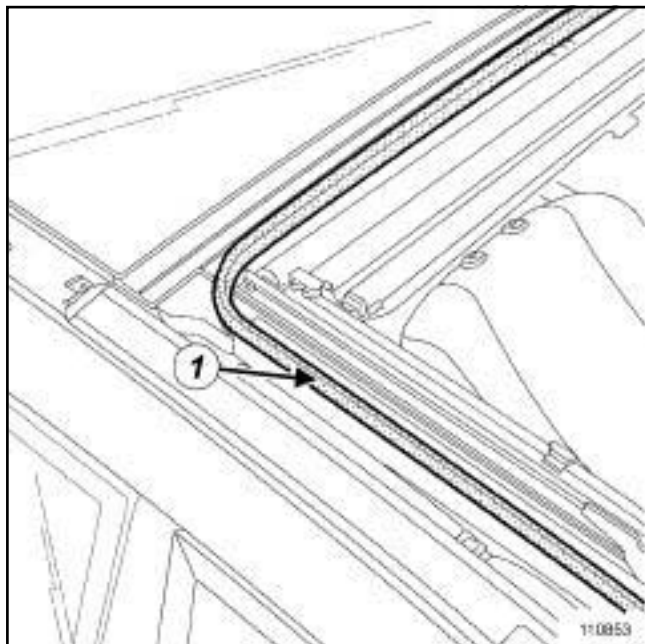


110853

❑

WARNING

Replace the seal (1) every time it is removed.

- ❑ Clean and then degrease the bonding area with heptane.

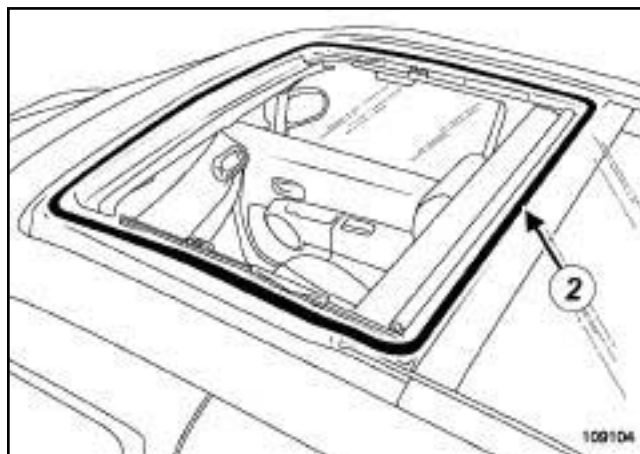

109104

- ❑ Position the seal weld on the rear centre section (2) .

Bond the seal using adhesive with part no.: **77 11 223 369**.

- ❑ Refit the sunroof mobile panel (see **Sunroof moving panel: Removal - Refitting**) (MR 365, 52A, Non-side opening element mechanisms).


Initialise the sunroof motor (see **Electric window - Initialisation**) (MR 366, 87D, Electric window-sunroof).

B84 or C84

Essential special tooling

Car. 1363 Set of trim removal levers.

REMOVAL

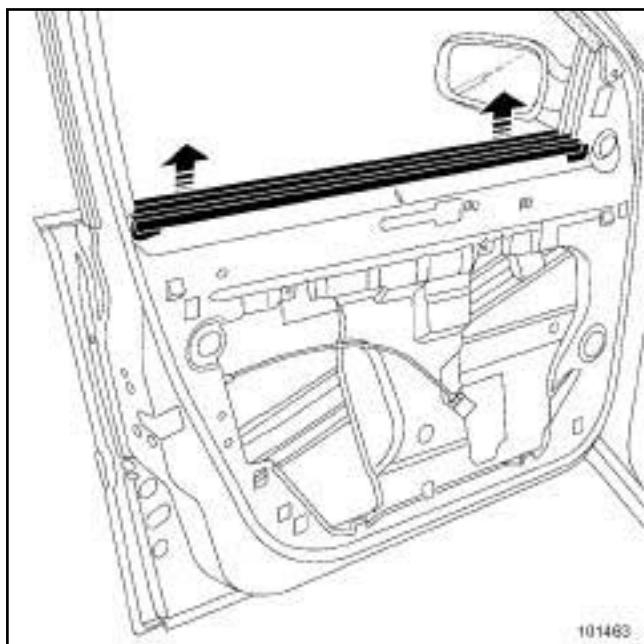

101463

- ☐ Detach the weatherstrip using the tool (**Car. 1363**).


E84

REMOVAL

I - REMOVAL PREPARATION OPERATION

- ☐ Remove the front side door trim (see **Front side door trim: Removal - Refitting**) (72A, Side opening elements trim).

II - OPERATION FOR REMOVAL OF PART CONCERNED

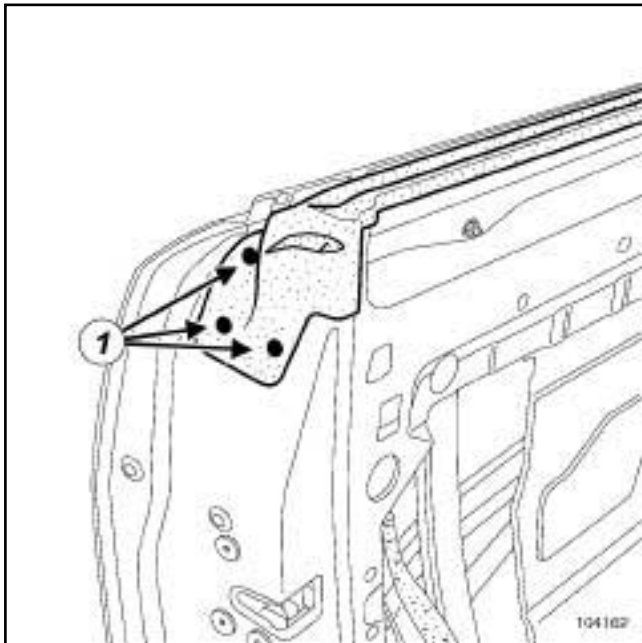

104162

- ☐ Remove:
 - the clips (1) ,
 - the front side door interior weatherstrip.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- ☐ Refit:
 - the front side door interior weatherstrip,
 - the clips (1) .

II - FINAL OPERATION


- ☐ Refit the front side door trim (see **Front side door trim: Removal - Refitting**) (72A, Side opening elements trim).

Essential special tooling

Car. 1363


Set of trim removal levers.

REMOVAL

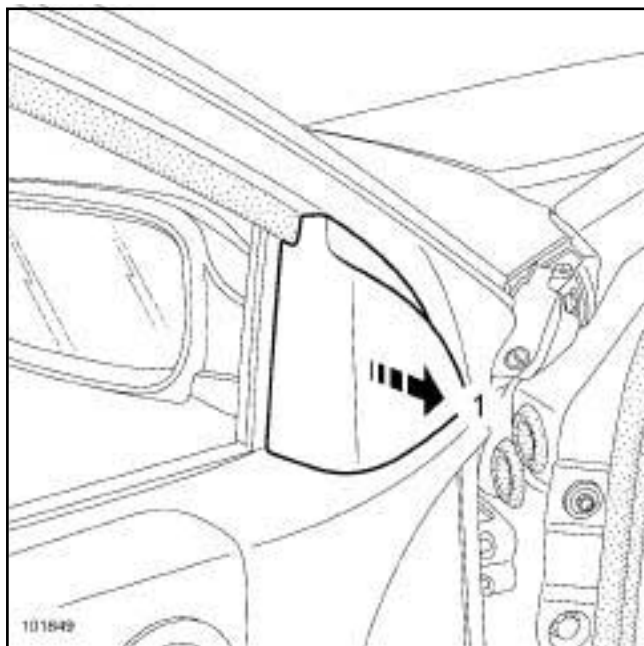


101849

- ☐ Remove interior trim (1) .

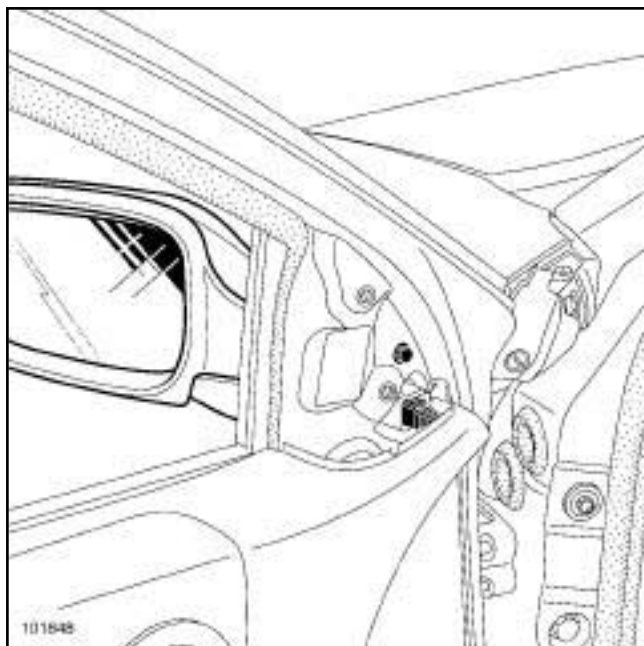

101848

- ☐ Remove the door mirror retaining bolt.
- ☐ Disconnect the connector.
- ☐ Remove the rear-view mirror.

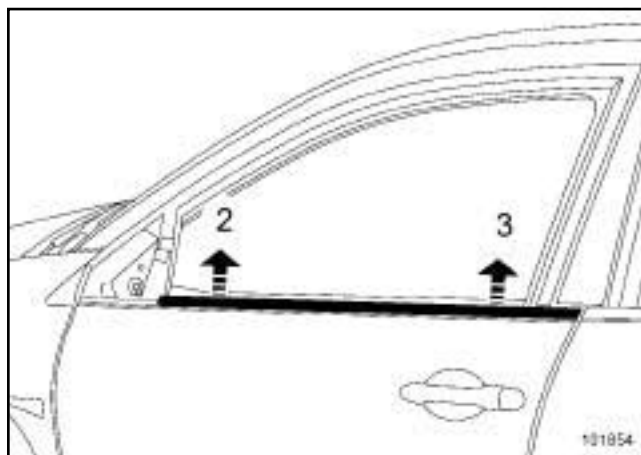

101854

- ☐ Carefully remove the weatherstrip at (2) and (3) using the (Car. 1363).

REFITTING


- ☐ Proceed in the reverse order to removal.

B84 or K84 or L84 or S84

Essential special tooling

Car. 1363 Set of trim removal levers.

REMOVAL

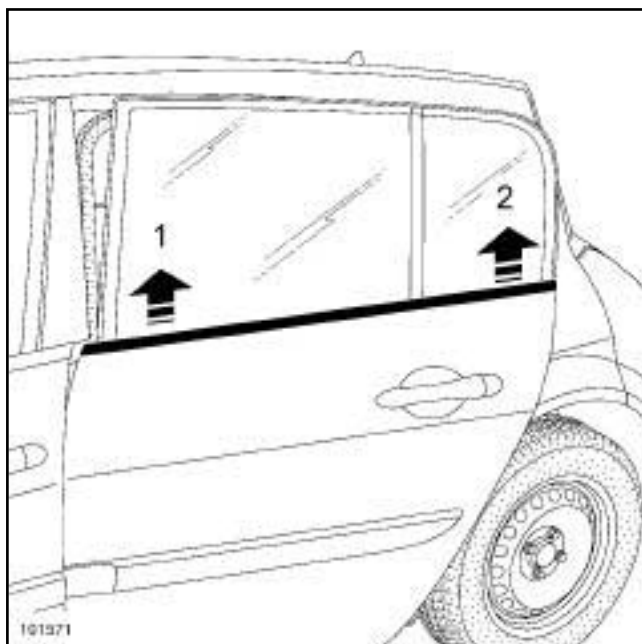

101571

- ☐ Carefully remove the exterior weatherstrip at (1) and (2) using the **(Car. 1363)**.


WARNING

The fixed window holds in the weatherstrip.

REFITTING

- ☐ Position the weatherstrip on fixed window **(2)**.
- ☐ Clip on the weatherstrip.

REMOVAL

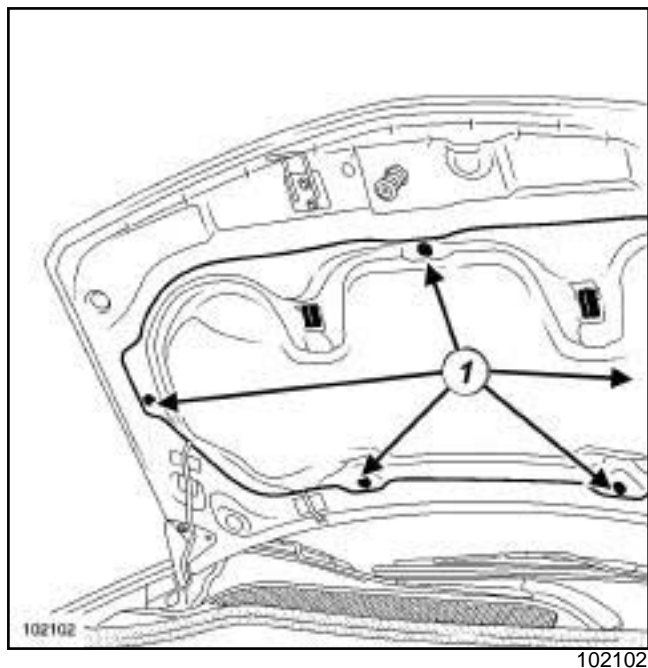

- ☐ Unclip the clips (1) using the unclipping pliers.
- ☐ Remove the bonnet soundproofing downwards.

REFITTING

- ☐ Replace the clips if necessary.
- ☐ Proceed in the reverse order to removal.